


Alaris™ VP Plus Guardrails™ Volumetric Pump

Directions For Use
en

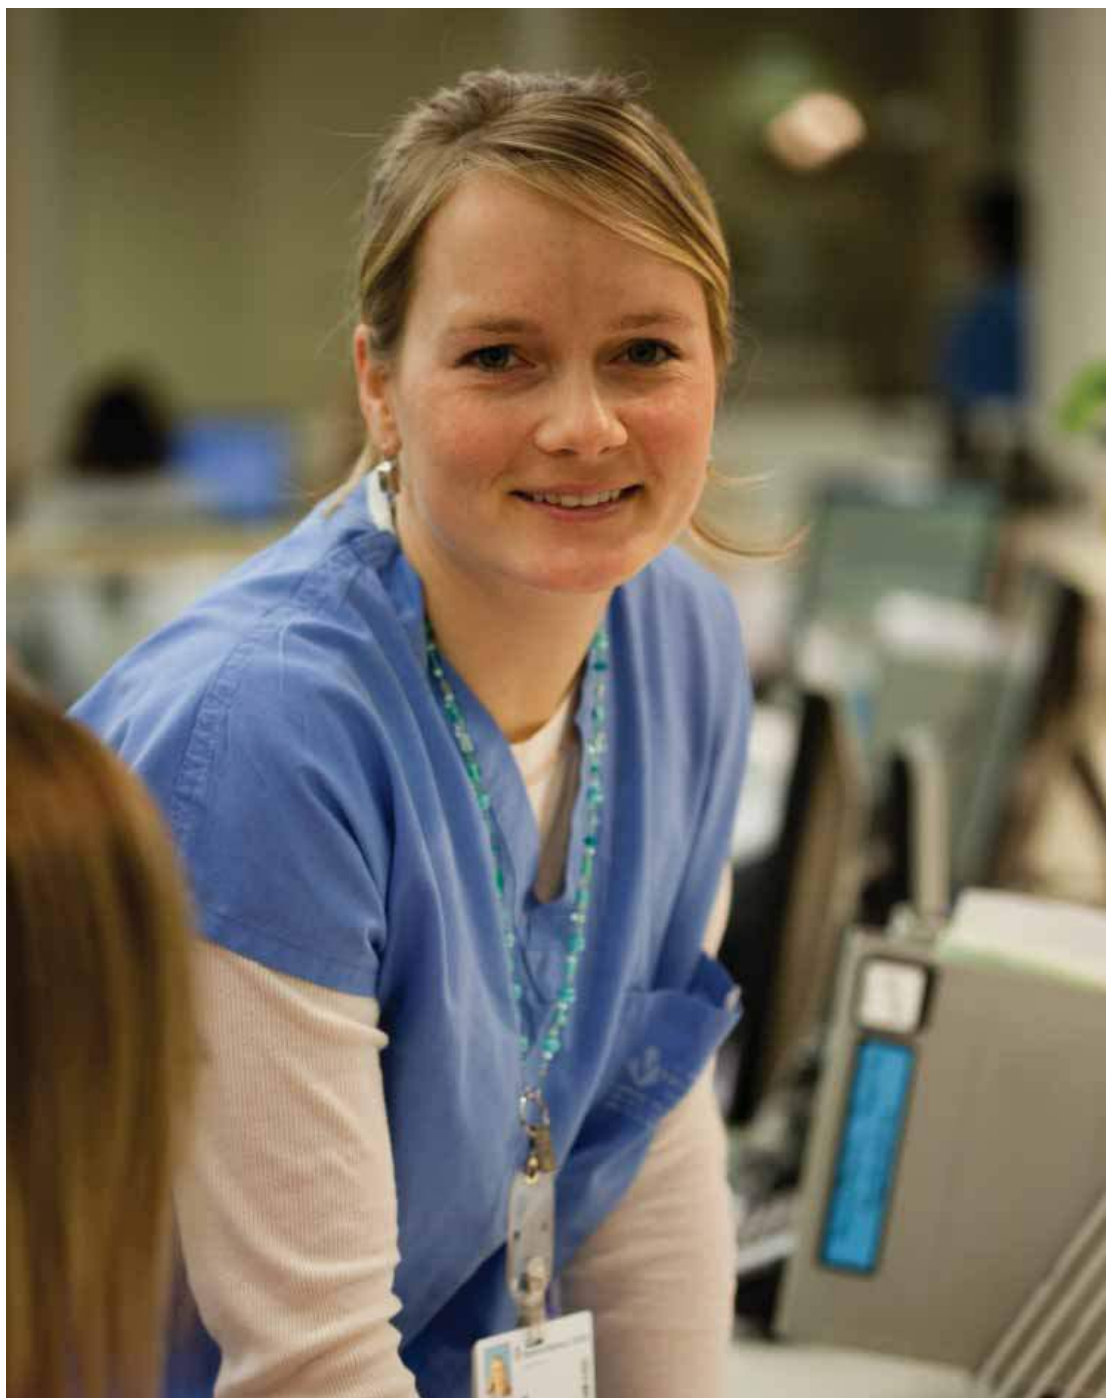

Contents

	Page
Introduction	4
Intended Purpose	4
Conditions for Use	4
Indications	4
Contraindications	4
About This Manual	4
Conventions Used in This Manual	4
Features of the Pump	5
Controls and Indicators	6
Controls	6
Indicators	6
Symbol Definitions	7
Labelling Symbols	7
Main Display Features	8
Main Display	8
Screen Icons	8
Operating Precautions	9
Infusion Sets	9
Using Collapsible Bags, Glass Bottles and Semi Rigid Containers	9
Operating Environment	9
Alarm Conditions	10
Mounting the Pump	10
Electromagnetic Compatibility and Interference	10
Earth Conductor	10
Hazards	11
Getting Started	12
Initial Set Up	12
Power Input	12
Pole Clamp Installation	13
Docking Station/Workstation* or Equipment Rail Installation	13
The Alaris Safety Clamp*	14
Loading an Infusion Set	15
Starting the Infusion	18
Infusion Setup	18
Priming the Infusion Set	19
Start Infusion	19
Bolus	20
Bolus Infusions	20
Bolus Mode - Disabled	20
Bolus Mode - Enabled	20
BOLUS Enabled - HANDSON Only	20
BOLUS Enabled - HANDSON and HANDSFREE	20
Pressure Features	21
In-Line Pressure Monitoring	21
Pressure Occlusion Alarm Options	21
Pressure Trend	21

Basic Features	22
Clear Volume Infused	22
Setting a VTBI	22
KVO (Keep Vein Open) Rate	22
Selecting the Infusion Setup	22
Rate Lock	23
Adjusting Existing Dosing or Protocol Infusions - Set By ml/h / Set By Doserate	23
Dosing Summary	23
Add Drug	23
Primary Setup	23
Set VTBI Over Time	24
Adjust Alarm Volume	24
Alarm Volume Ramping	24
Event Log	24
Pump Details	24
Profile Filter	24
Standby	24
Changing the Infusion Set	25
Changing the Fluid Container	25
SmartSite™ Needle-Free System Instructions	25
Secondary (Piggyback) Infusions	26
Typical Secondary infusions	26
Setting up a secondary infusion	26
Service Configuration Mode	27
Alarm Presets	27
Configured Options	27
Date and Time	27
Pump Reference	27
Language	27
Backlight and Contrast	28
Pump Configuration available via the Alaris Editor Software	28
Data Set Configuration Settings	28
General Pump Configuration Settings	28
Large Volume Pump Configuration Settings	29
Drug Library available via the Alaris Editor Software	30
Concentration Settings	30
Dose Rate Settings	30
Bolus Settings	30
Pressure Settings	30
Display of Units	30
Alarms	31
Alarm Priority Level Indicators	31
High Priority Alarms	31
Medium Priority Alarms	33
Low Priority Alarms	34
Prompts	34
Advisories	35
Flow Sensor Operation (Optional)	36

Specifications	37
Associated Products	40
The Alaris Gateway Workstation	40
The Alaris DS Docking Station	40
Infusion Sets	41
Standard Infusion Sets	41
Blood Infusion Sets	41
Burette Sets	41
Oncology Infusion Sets	41
Secondary Infusion Sets	42
Low Priming Volume Infusion Sets	42
Maintenance	43
Routine Maintenance Procedures	43
Battery Operation	43
Cleaning and Storage	44
Cleaning the Pump	44
Cleaning the Door	44
Cleaning the Flow Sensor	44
Storing the Pump	45
Disposal	45
Information on Disposal for Users of Waste Electrical and Electronic Equipment	45
Information on Disposal in Countries outside the European Union	45
IrDA, RS232 and Nursecall Specification	46
IrDA/RS232/Nursecall Feature	46
RS232/Nursecall Connection Data	46
IrDA	46
Trumpet and Flow Rate Curves	47
Products and Spare Parts	49
Spare Parts	49
Alaris Editor Software	49
Service Contacts	50

Introduction

The Alaris™ VP Plus Guardrails™ Volumetric Pump, hereinafter referred to as the *Pump*, is a volumetric infusion Pump that provides accurate and reliable infusions over a range of rates. The Pump has enhanced pressure monitoring capability allowing the clinician to monitor patient specific in-line pressure changes with high precision.

The Pump includes Guardrails Software and is supplied with a default data set installed. The default data set allows the Pump to be used in ml/h and dosing only. There are no drug or fluid names loaded in the default data set, so there are no related Guardrails Software safety limits available. The Alaris Editor software can be used to create a data set to include drugs or fluids, with the related Guardrails Software limits.

The Alaris Editor Software, available separately as a product or a service, permits the user to create up to 100 standardized drug protocols for up to 30 clinical areas (profiles). Guardrails Software allows the user to program soft and hard safety limits for each drug. Soft limits can be overridden at the bedside by the clinician and provide clinical flexibility in patient medication delivery. Hard limits cannot be overridden helping to prevent clinically significant medication errors. See the Alaris Editor Software help files for further details for creating, managing and transferring Guardrails Software data sets.

Intended Purpose

The Alaris VP Plus Guardrails Volumetric Pump is intended for use by clinical staff for the purpose of controlling infusion rate and volume.

Conditions for Use

The Alaris VP Plus Guardrails Volumetric Pump should only be operated by clinical staff competent in the use of automated volumetric pumps and in the management of infusion therapy. Clinical staff should determine the suitability of the device in their care area for its intended purpose. References to *user* within this manual are intended to be restricted to trained clinical staff experienced with infusion practices.

Indications

The Alaris VP Plus Guardrails Volumetric Pump is indicated for the infusion of fluids, medications, parenteral nutrition, blood and blood products through clinically acceptable routes of administration; such as intravenous (IV), subcutaneous or irrigation of fluid spaces. The Alaris VP Plus Guardrails Volumetric Pump is indicated for use on adults, paediatrics and neonates.

Contraindications

The Alaris VP Plus Guardrails Volumetric Pump is contraindicated for:

- Enteral therapies
- Epidural therapies

About This Manual

The user must be thoroughly familiar with the Pump described in this manual prior to use.

All illustrations used in this manual show typical settings and values which may be used in setting up the functions of the Pump.

These settings and values are for illustrative use only. The complete range of settings and values are detailed in the 'specifications section'.




It is important that you only refer to the most recent version of the Directions for Use and Technical Service Manual for your CareFusion products. These documents are referenced on www.carefusion.com. Copies can be obtained by contacting your local CareFusion representative.

Conventions Used in This Manual





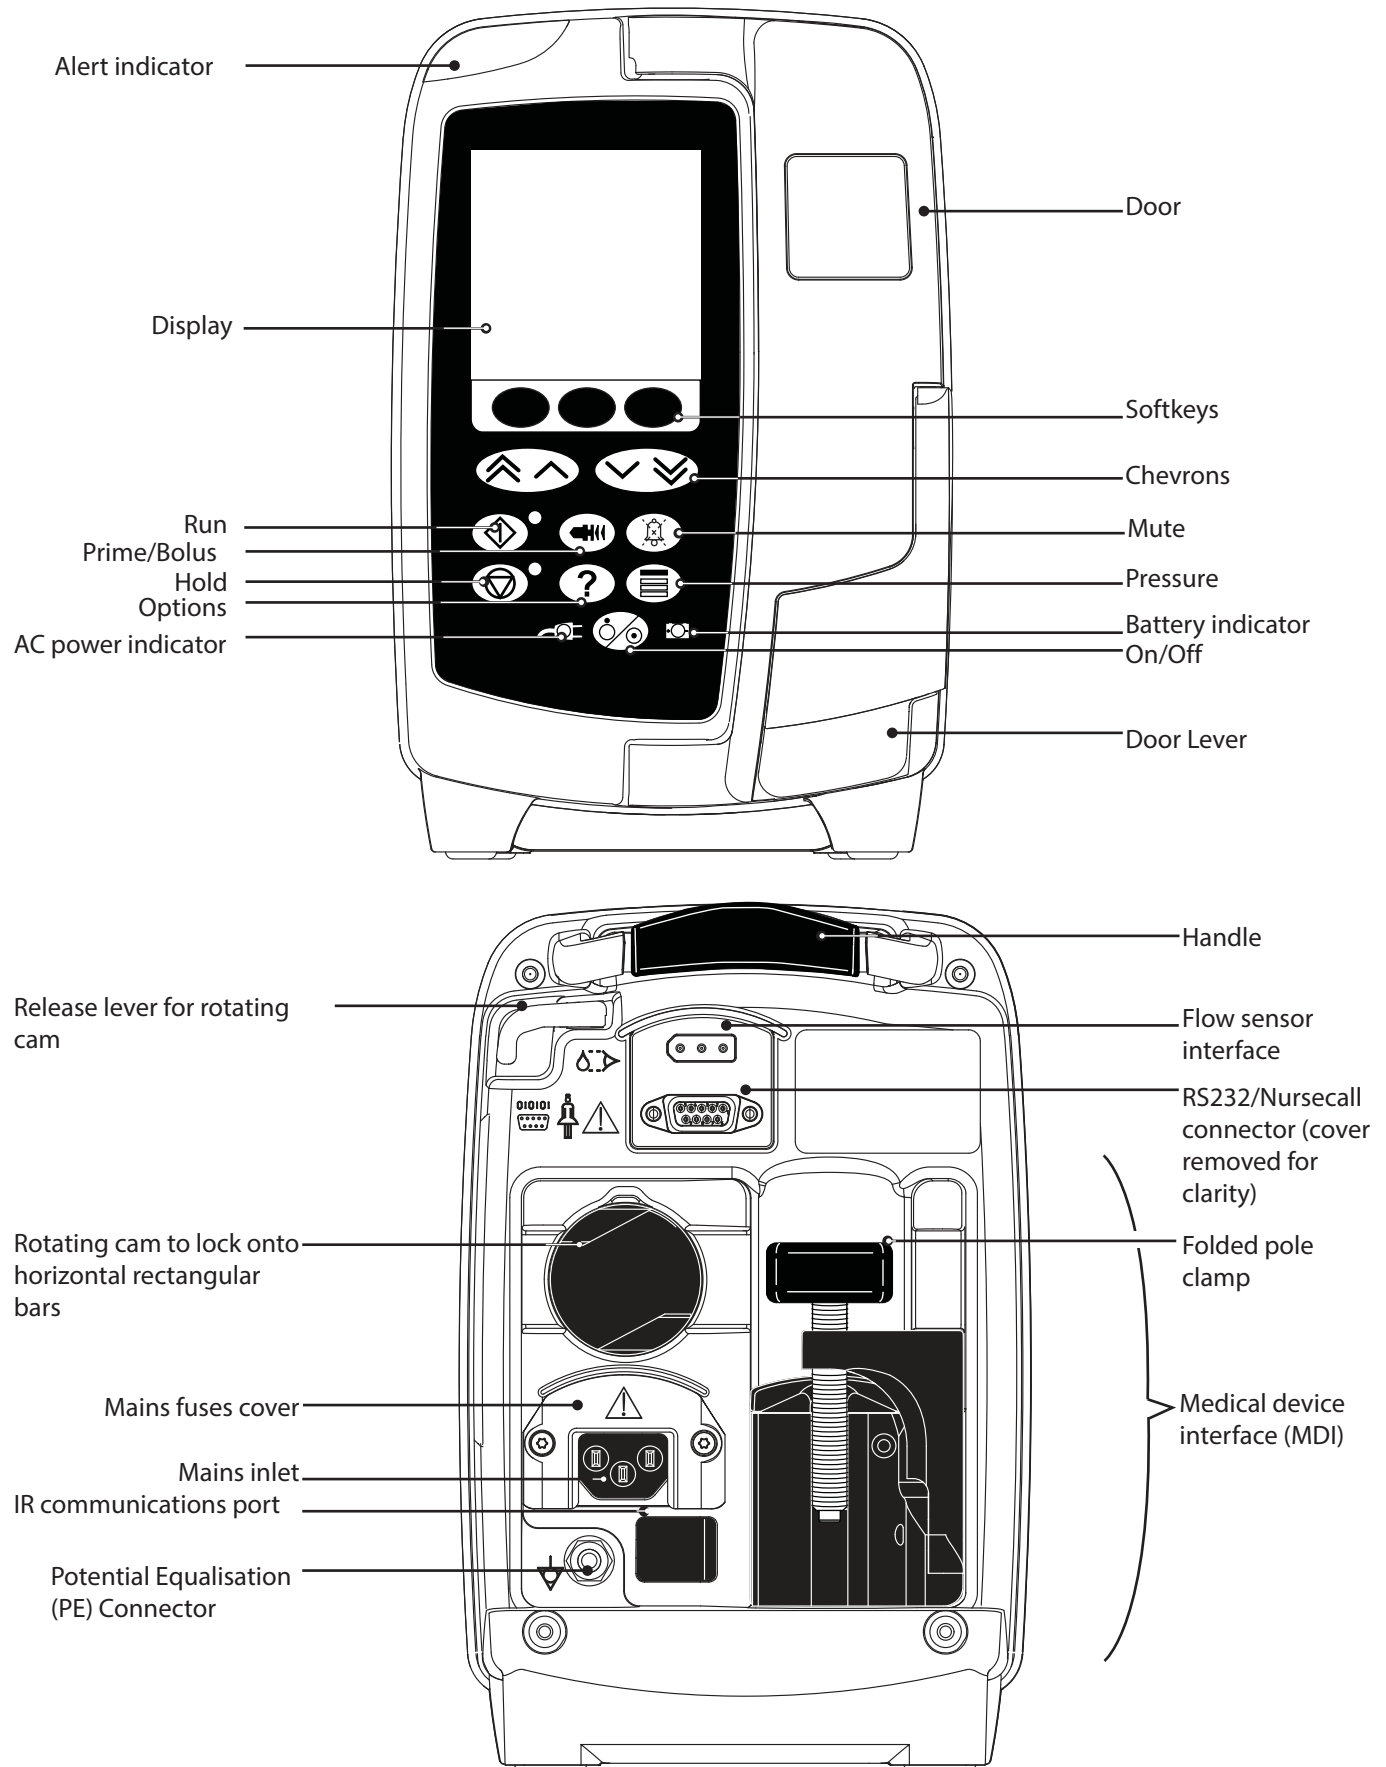




BOLD	Used for Display names, software commands, controls and indicators referenced in this manual, for example, Battery Indicator , PURGE , ON/OFF button.
'Single quotes'	Used to indicate cross-references made to another section of this manual.
<i>Italics</i>	Used to refer to other documents or manuals and also used for emphasis.
	Important Information: Wherever this symbol is shown an Important note is found. These notes highlight an aspect of use that is important for the user to be aware of when operating the Pump.

Features of the Pump





Controls and Indicators

Controls
















Symbol	Description
	ON/OFF button - Press once to switch the Pump on. Press and hold down for approximately three seconds to switch the Pump off.
	RUN button - Press to start the infusion. The green LED will flash during infusion.
	HOLD button - Press to put the infusion on hold. The amber LED will be lit while on hold.
	MUTE button - Press to silence active alarm, warning or prompt for 2 minutes. The audio from the active alarm, warning or prompt will continue to sound every 2 minutes until the condition has been resolved. To re-enable the alarm audio press the MUTE button a second time. Note: Attention alarm only: when not in alarm press and hold until three audible beeps are heard to extend the silence period to 15 minutes.
	PRIME/BOLUS button - Press to access PRIME or BOLUS softkey. Press and hold down softkey to operate. PRIME - primes the infusion set with fluid when setting up an infusion for the first time. <ul style="list-style-type: none"> • Pump is on hold. • Infusion set is not connected to a patient. • Volume infused (VI) is not added to the total volume infused displayed. BOLUS - delivers fluid or drug at an accelerated rate. <ul style="list-style-type: none"> • Pump is infusing. • Infusion set is connected to patient. • Volume infused (VI) is added to the total volume infused displayed.
	OPTION button - Press to access optional features.
	PRESSURE button - Use this button to display the line pressure, trend display, and adjust the downstream occlusion alarm limit.
	CHEVRON keys - Double or single for faster/slower increase/decrease of values shown on display.
	BLANK SOFTKEYS - Use in conjunction with the prompts shown on the display.

Indicators

Symbol	Description
	AC POWER indicator - When illuminated the Pump is connected to an AC power supply and the battery is being charged.
	BATTERY indicator - When illuminated the Pump is running on the internal battery. When flashing, the remaining battery run time is limited.


Symbol Definitions

Labelling Symbols

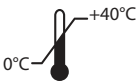Symbol	Description
	Caution: If a tool is required to remove a cover then this should be performed by Qualified Service Personnel only.
	Consult accompanying documents
	Potential Equalisation (PE) Connector
	RS232/Nursecall Connector
	Defibrillation-proof type CF applied part (Degree of protection against electrical shock)
IP33	Protected from solid objects greater than 2.5mm. Protected against direct sprays up to 60° from the vertical
	Alternating Current
	Observe Electrostatic Discharge (ESD) precautions
	Device complies with the requirements of Council Directive 93/42/EEC as amended by 2007/47/EC
	Date of Manufacture
	Manufacturer
	Connector for Flow Sensor
	Not for Municipal Waste
	Fuse rating
	Authorised representative in the European Community
	Operating Temperature Range - Pump can be used between 0 and 40 degrees centigrade.

Main Display Features

Main Display

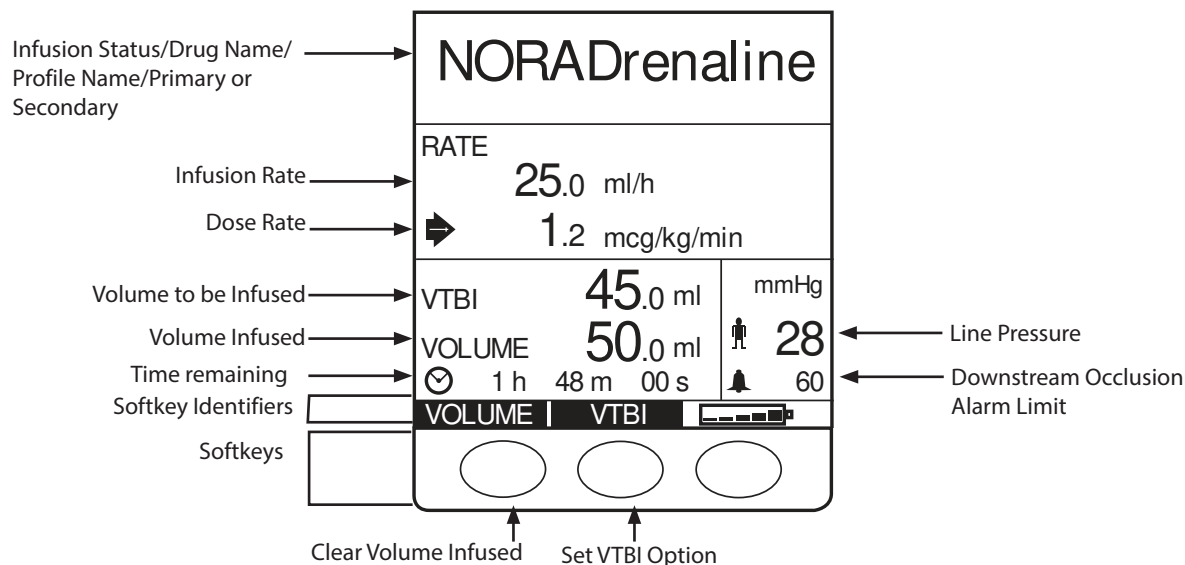


Screen Icons

Symbol	Description
	Time icon - Indicates time remaining before VTBI will be completed. If the time is greater than 24 hours then 24+ will be displayed. Also indicates pressure sample time on the Pressure Trend screen.
	Battery icon - Indicates battery charge level to highlight when the battery will require recharging.
	Line Pressure icon - Shows the current in-line pressure value in mmHg.
	Downstream Occlusion Alarm Limit icon - Shows the downstream occlusion alarm limit in mmHg.
	Indicates that the value entered is outside of the Guardrails soft limits. When the warning is overridden this indicates Guardrails safety protocols are in use.
	Indicates that the value entered is outside of the Guardrails hard limits. This warning cannot be overridden. This symbol is also used to prompt the user to set the rate.
	Indicates that the Pump is running at a rate below a Guardrails soft limit.
	Indicates that the Pump is running at a rate above a Guardrails soft limit.

Operating Precautions

Infusion Sets

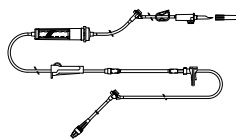

- To ensure correct and accurate operation, only use CareFusion single use infusion sets described in this Directions For Use.
- It is recommended that infusion sets are changed according to the instructions in the 'Changing the Infusion Set' section. Always read the Directions For Use supplied with the infusion set prior to use.
- Use of non-specified infusion sets may impair the operation of the Pump and the accuracy of the infusion.
- When combining several apparatus and/or instruments with infusion sets and other tubing, for example via a 3-way tap or multiple infusion, the performance of the Pump may be affected and should be monitored closely.
- Uncontrolled flow may result if the infusion set is not properly isolated from the patient, i.e. closing a tap in the set or activating an in-line clamp/roller clamp.
- CareFusion infusion sets are fitted with an in-line clamp, which can be used to occlude tubing in case it is required to stop fluid flow.
- The Pump is a positive pressure Pump, which should use infusion sets fitted with Luer lock fittings or equivalent locking connectors.
- To infuse from a burette, close the roller clamp above the burette and open the clamp on the vent on top of the burette.
- Discard infusion set if the packaging is not intact or the protector cap is detached. Ensure sets are not kinked as this may occlude the tubing.


Using Collapsible Bags, Glass Bottles and Semi Rigid Containers

- It is recommended that the air vent be opened on the Pump sets if using glass bottles or semi-rigid containers, to reduce the partial vacuum formed as the fluid is infused from the container. This action will ensure the Pump can maintain volumetric accuracy while the container empties. The action of opening the air vent for semi-rigid containers should take place after the spiking of the container and priming of the drip chamber.

Steps for the Collapsible Bags

- Follow steps 1 to 3 as shown for the semi-rigid containers, however do not open vent as in step 4, but prime the set as per step 5. Ensure the bag outlet is fully pierced before filling the drip chamber.

Steps for Semi-rigid Containers

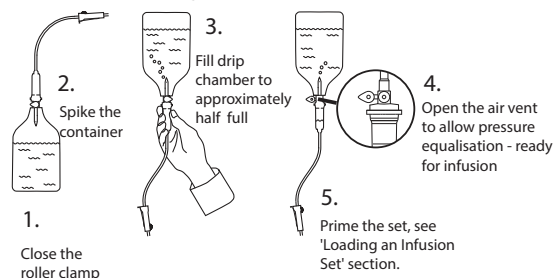

Operating Environment

- Intended environments include general wards, critical and intensive care, operating rooms, accident and emergency rooms. The Pump may be used in an ambulance environment. Ensure that the Pump is appropriately attached using the provided pole clamp. The Pump is designed to withstand possible bumps and vibrations whilst being used in an ambulance, complying with the standard EN 1789. If the Pump is dropped or experiences any severe physical disturbances, arrange a thorough inspection by Qualified Service Personnel as soon as is practically possible. The Pump may also be used outside the ambulance as long as the temperature is within the specified range as stated in the 'Specifications' section and on the Pump label.
- When using any infusion pump in conjunction with other pumps or devices requiring vascular access, extra care is advised. Adverse delivery of medication or fluids can be caused by the substantial variation in pressures created within the fluid channels of such pumps. Typical examples of those pumps are used during dialysis, bypass or cardiac assist applications.
- The Pump is suitable for use in all establishments, including domestic establishments and those directly connected to the public low voltage power supply network that supplies buildings used for domestic purposes.
- This Pump is not intended to be used in the presence of a flammable anaesthetic mixture with air or oxygen or nitrous oxide.

Alarm Conditions



- Several alarm conditions detected by this Pump will stop the infusion and generate visual and audible alarms. Users must perform regular checks to ensure that the infusion is progressing correctly and no alarms are operating. The user must be within proximity to the pump so that they have the ability to recognize when the Pump is in an alarm state.
- At power-up, the Pump will activate both the alert indicator and the audio alert function. A Pump that does not activate both must not be used and should be sent to Qualified Service Personnel.
- Should any alarm condition persist after all appropriate mitigations, it is recommended to replace that particular Pump and quarantine the Pump for the attention of Qualified Service Personnel.
- Alarm tone settings are preserved in the case of a power loss, however some system faults will result in loss of alarm settings. The new alarm tone settings will be stored when powering down from tech mode after a change. The settings will be lost if a cold-start is performed, but should be saved for faults that don't require a cold start.

Mounting the Pump



- The most accurate pressure monitoring in the infusion set is achieved when the Pump is positioned close to the patient's heart level.
- Do not mount the Pump in a horizontal position or with the AC power inlet pointing upwards as this could affect electrical safety in the event of a fluid spill.

Electromagnetic Compatibility and Interference



- Therapeutic Radiation Equipment: Do not use the Pump in the vicinity of any Therapeutic Radiation Equipment, such as Linear Accelerators. Levels of radiation generated by Therapeutic Radiation Equipment may severely affect functioning of the Pump. Please consult manufacturer's recommendations for safe distance and other precautionary requirements. For further information, please contact your local CareFusion representative.
- Magnetic Resonance Imaging (MRI): The Pump contains ferromagnetic materials which are susceptible to interference with magnetic fields generated by MRI devices, therefore the Pump is not an MRI compatible Pump. If use of the Pump within an MRI environment is unavoidable, then CareFusion highly recommends securing the Pump at a safe distance from the magnetic field outside the identified Controlled Access Area in order to evade any magnetic interference to the Pump or MRI image distortion. This safe distance should be established in accordance with the manufacturers' recommendations regarding electromagnetic interference (EMI). For further information, please refer to the product Technical Service Manual (TSM). Alternatively, contact your local CareFusion representative for further guidance.
- Accessories: Do not use any non-recommended accessory with the Pump. The Pump is tested and compliant with the relevant EMC claims only with the recommended accessories. Use of any accessory, transducer or cable, other than those specified by CareFusion, may result in increased emissions or decreased Pump immunity.
- This Pump is a CISPR 11 Group 1 Class B device and uses RF energy only for its internal function in the normal product offering, therefore its RF emissions are very low and are not likely to cause any interference with the nearby electronic equipment. Nevertheless, this Pump emits electromagnetic radiation which is within the levels specified by IEC/EN60601-2-24 and IEC/EN60601-1-2. If the Pump interacts with other equipment, measures should be taken to minimise the effects, for instance by repositioning or relocation.



Earth Conductor



- The Pump is a Class I device, therefore must be earthed when connected to an AC power supply.
- When connected to an external power source, a three-wire (Live, Neutral, Earth) supply must be used. If the integrity of the external protective conductor on the AC power cable has been compromised, the Pump should be disconnected from the AC power source and operated utilising the internal battery.
- This Pump also has an internal power source.

Hazards



- An explosion hazard exists if the Pump is used in the presence of flammable anaesthetics. Exercise care to locate the Pump away from any such hazardous sources.

- Dangerous Voltage: An electrical shock hazard exists if the Pump's casing is opened or removed. Refer all servicing to Qualified Service Personnel.

- Do not open the RS232/Nurse Call protective covering when not in use. Electrostatic discharge (ESD) precautions are required when connecting RS232/Nurse Call. Touching the pins of the connectors may result in ESD protection failure. It is recommended that all actions must be taken by Qualified Service Personnel.

- If this Pump is dropped, subjected to excessive moisture, fluid spillage, humidity or high temperature, or otherwise suspected to have been damaged, remove it from service for inspection by Qualified Service Personnel. When transporting or storing the Pump, use original packaging where possible, and adhere to temperature, humidity and pressure ranges stated in the Specifications section and on the outer packaging.

- If this Pump behaves abnormally, remove from service and contact Qualified Service Personnel.

- Care should be taken to ensure power cables and RS232 cables do not present a trip hazard.

- Care should be taken in the placement of power cables and RS232 cables to prevent accidental tugging.

- Warning: Alaris VP Plus Guardrails Volumetric Pumps should not be modified or altered in any way, except where explicitly directed or authorised by CareFusion. Any use of Alaris VP Plus Guardrails Volumetric Pumps which have been altered or modified otherwise than in strict application of directions provided by CareFusion, is at your sole risk, and CareFusion does not provide any warranty for or endorsement on any Alaris VP Plus Guardrails Volumetric Pump that has been so modified or altered. CareFusion product warranty shall not apply in the event the Alaris VP Plus Guardrails Volumetric Pump has suffered damage or premature wear, or malfunctions or otherwise operates incorrectly, as a result of unauthorised modification or alteration of the Alaris VP Plus Guardrails Volumetric Pump.

- Restarting an Infusion following an Air-in-Line Alarm

The Pump may be restarted by opening the door, assessing and removing any air from the tubing guide area and in the infusion set on the patient side of the Pump, if required, according to hospital policy. Close the door and cancel the air-in-line alarm. Restarting the infusion will reactivate the air-in-line system and will alarm if the preset air-in-line limit is exceeded.


- All Pumps in a single care area should be configured with the same alarm tones to avoid User confusion

Getting Started



Before operating the Pump read this Directions For Use (DFU) manual carefully.

Initial Set Up

1. Check that the Pump is complete, undamaged and that the voltage rating specified on the label is compatible with your AC power supply.
2. Items supplied are :
 - Alaris VP Plus Guardrails Volumetric Pump
 - Directions For Use (CD)
 - AC Power Cable (as requested)
 - Protective Packaging
3. Connect the Pump to the AC power supply for at least 2½ hours to ensure that the internal battery is charged, verify that the  is lit.



- **A default data set is already installed in the Pump. The Alaris Editor software can be used to create an approved data set that can be uploaded into the Pump.**
- **The Pump will automatically operate from its internal battery if the Pump is switched on without being connected to the power supply.**
- **Should the Pump fail to perform correctly, replace it in its original protective packaging, where possible and contact Qualified Service Personnel for investigation.**

Power Input

The Pump is powered from the AC supply through a standard IEC AC connector. When connected to the AC supply the AC Power indicator is illuminated.



- **To isolate the Pump from AC supply remove the AC connector from the source socket. The Pump should be positioned to allow access for disconnecting the AC connector.**
- **The Pump should be positioned to allow access for disconnecting the AC connector.**

Pole Clamp Installation



Prior to each use, check the pole clamp:

- does not show any signs of excessive wear,
- does not show any signs of excessively loose movement in the extended, mountable position.

If these signs are observed, the pumps should be taken out of service for examination by Qualified Service Personnel.


The pole clamp is fitted to the rear of the Pump and will provide secure fixing to vertical IV poles of a diameter between 15 and 40mm.

1. Pull the folded pole clamp towards you and unscrew the clamp to leave enough room for the size of the pole.
2. Place Pump around pole and tighten screw until the clamp is secured to the pole.



Never mount the Pump such that the IV infusion stand becomes top heavy or unstable. Ensure the pole clamp is folded away and stored within the recessed area at the rear of the Pump before connecting to a Docking Station/Workstation* or when not in use.


Recessed area

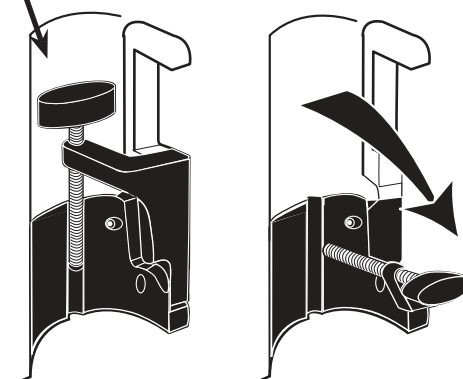

Docking Station/Workstation* or Equipment Rail Installation

The rotating cam can be fitted to the rectangular bar on the Docking Station/Workstation* or equipment rails measuring 10mm by 25mm.

1. Align the rotating cam on the rear of the Pump with the rectangular bar on the Docking Station/Workstation* or the equipment rail.
2. Push the Pump firmly onto the rectangular bar or equipment rail.
3. The Pump should *click* into position when fitted to the bar.
4. Ensure that the Pump is positioned securely.
5. To release, push the release lever and pull the Pump forwards.

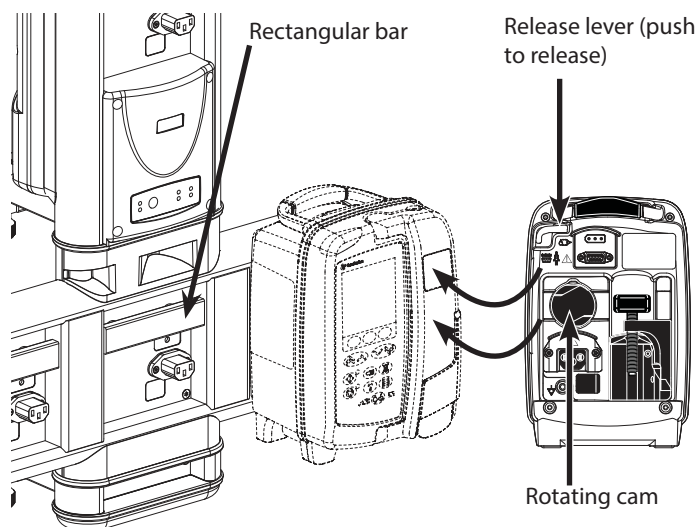

* Alaris DS Docking Station and Alaris Gateway Workstation.




It is recommended that infusion bags be located on a hanger directly above the Pump with which they are being used. This minimises the potential for confusion of infusion sets when multiple volumetric pumps are used.

The Alaris Safety Clamp*


Safety Clamp in Occluded Position:

After the infusion set is loaded into the Pump, opening the door activates door hooks which will pull the Safety Clamp Slider out, as shown:

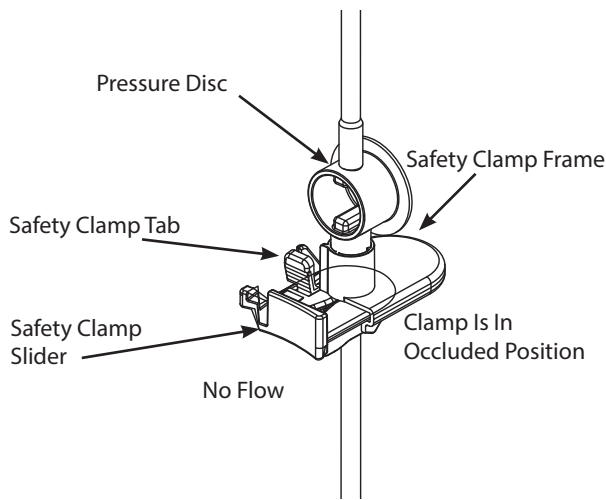


Safety Clamp in Non-occluded Position:

When a new infusion set is removed from packaging the Safety Clamp will be in this position**:

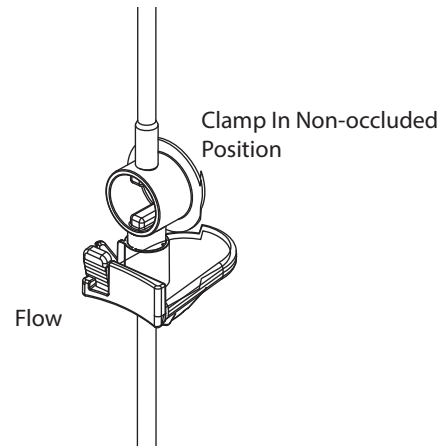

Manually Operating the Safety Clamp:

To move the slider into the non-occluded position manually, push up Safety Clamp Tab and push Safety Clamp Slider completely into Safety Clamp Frame:

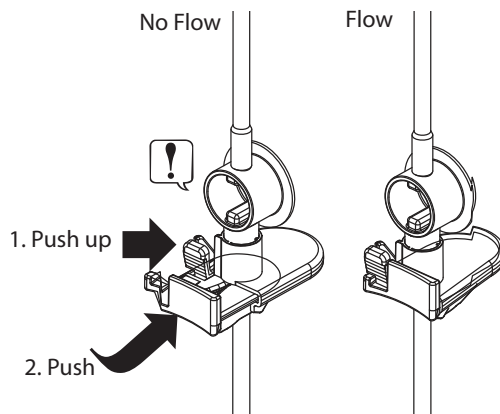

Pushing the Safety Clamp Slider completely into Safety Clamp Frame may lead to uncontrolled flow to the patient. Therefore, always close the roller clamp before pushing in the Safety Clamp Slider, if required.

* Hereinafter referred to as Safety Clamp.

** This is necessary to avoid tube damage during storage and to ensure correct sterilisation and allows immediate priming.

Loading an Infusion Set




- Only use dedicated Alaris VP Plus Guardrails Volumetric Pump infusion sets, refer to 'Infusion Sets' section.
- Ensure the appropriate infusion set for the fluid/drug to be infused has been selected.
- Follow the instructions supplied with the individual infusion set.
- Ensure that the tubing is inserted completely into the top set retainer through to the tubing guide avoiding any slack.
- Infusion accuracy is dependant upon correct placement of top adaptor of the infusion set into the top set retainer of the Pump. Failure to properly place the adaptor in the retainer may lead to over or under infusions.
- If the door is difficult to close, open the door fully to verify correct loading of the infusion set.
- Do not pull or stretch the infusion set, when priming/loading/re-loading the infusion set.

Step

1. Remove infusion set/burette from packaging, apply roller clamp, ensure air vent(s) are closed/clamped.
2. Spike fluid container ensuring spike is fully inserted into the container.
3. Fill the drip chamber to at least ½ full.
4. Prime infusion set slowly, inverting pumping segment. Massage the pressure disc in the direction of the fluid flow to ensure air removal.
5. Hang the fluid container at a minimum height of 45 cm from the bottom of the Pump to the bottom of the fluid container.

Notes

- Opening the air vent too soon can wet the filter and prevent flow
- Where possible the fluid in container should be at room temperature
- Spike being fully inserted ensures the fluid path from the container is fully open
- Do not overfill the drip chamber when using a flow sensor
- Priming quickly causes turbulence resulting in air bubbles, which may lead to air-in-line alarms
- For burette, glass bottles and semi-rigid containers, open air vent(s) after the infusion set has been primed half full. Leave closed for collapsible containers.

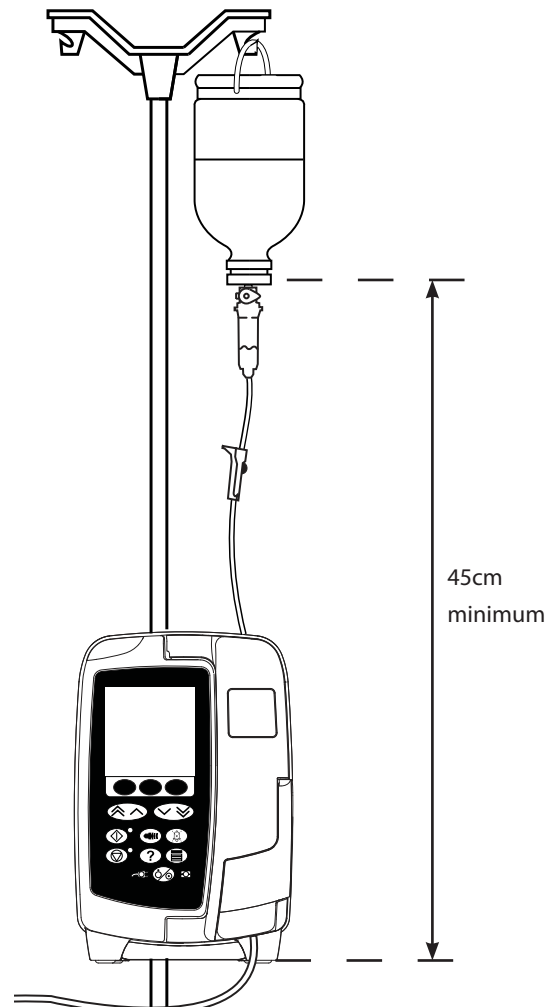


6. Close roller clamp.

Step


7. Open door and load infusion set as follows:

Notes


- Ensure infusion set tubing above the Pump is as straight as possible with no kinks

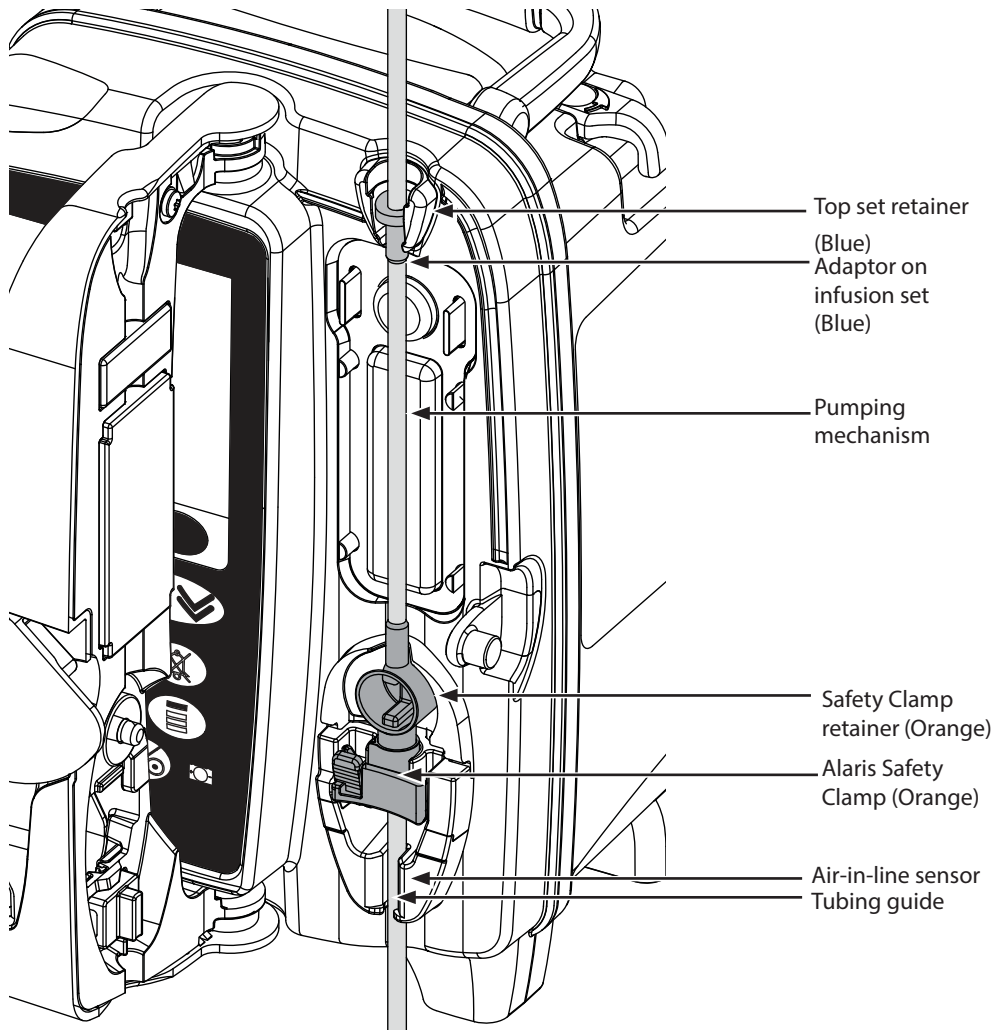

i) Fit top adaptor of infusion set into top set retainer.

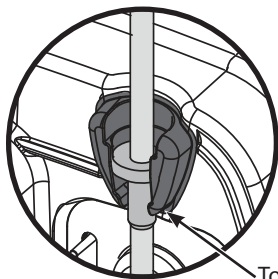

ii) Insert Safety Clamp into retainer.

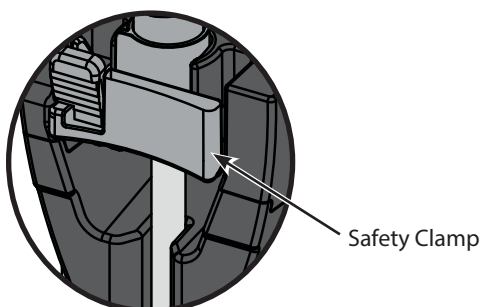

- Avoid any stretching of the silicone segment when loading, priming and re-loading the infusion set




Pushing on the Safety Clamp Slider may lead to uncontrolled flow to the patient. Therefore, always close the roller clamp before pushing on the safety clamp slider.

Step

- iii) Ensure infusion set is fully inserted into tubing guide and all air is removed from the infusion set.

Notes

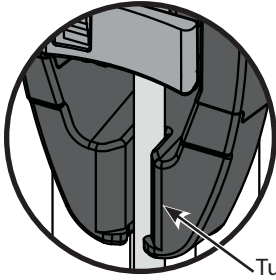

Tubing Guide

8. Close door and open roller clamp. Ensure no drops are falling in the drip chamber.
9. Ensure all air is removed from the set.
10. Connect the infusion set to the patient access device.

Starting the Infusion

Infusion Setup



When operating the Pump, Users should position themselves at a distance of approximately 0.5 metres from the display.

1. Connect the Pump to an AC power supply using the AC power cable.
2. Load the primed infusion set, see 'Loading an Infusion Set' section.
3. Connect flow sensor, if required.
4. Press the button.
 - The Pump will run a short self-test. Check two beeps are activated during this test.
 - Check the displayed date and time are correct. Check display shows the correct data set name and version number.

NOTE: The Pump starts up and displays previous settings.

5. **CLEAR SETUP?** - Selecting **NO** will retain all previous rate and volume settings, go to step 8. Selecting **YES** will automatically reset the rate and volume settings to zero and the **CONFIRM PROFILE?** screen will be displayed.
6. **CONFIRM PROFILE?** screen will show the data set name, version number and profile name:
 - a) Press **YES** softkey to confirm current profile and go to next step.
 - b) Selecting **NO** will display the profile selection screen, select correct profile using keys and press **OK** softkey to confirm. Confirm profile screen will display again, press **YES** softkey and **SELECT** screen will be displayed.

NOTE: The **CONFIRM PROFILE** screen is only shown if more than one profile is available in the data set. If a profile has been filtered, then the option to select **ALL** will be displayed in the profile selection screen. Selecting **ALL** will show the filtered profiles.

7. Select either **ml/h**, **DOSING ONLY** or **DRUGS (A-Z)** and press **OK** to confirm. Then follow the prompts as required.
 - a) ml/h

SELECT	
ml/h	
DOSING ONLY	
DRUGS	A B C D E
	F G H I J
	K L M N O
	P Q R S T
	U V W X Y Z
SELECT WITH	
OK	QUIT

1. Select **ml/h** from the list using the keys.
2. Press **OK** to confirm.
3. Enter the ml/h rate as prompted on the display in the next screen.

b) Dosing Only

SELECT	
ml/h	
DOSING ONLY	
DRUGS	A B C D E
	F G H I J
	K L M N O
	P Q R S T
	U V W X Y Z
SELECT WITH	
OK	QUIT

1. Select **DOSING ONLY** from the list using the keys.
2. Press **OK** to confirm.
3. Select the dosing units from the list using the keys, press **OK** to confirm.
4. Enter **DRUG AMOUNT** using the keys and if units need to be changed, select **UNITS** which will scroll through the units available. Press **OK** to confirm selection.
5. Use the keys to select the **TOTAL VOLUME**¹, press **OK** to confirm.
6. Enter **WEIGHT**² using the keys, press **OK** to confirm.
7. A summary of the **DOSING ONLY** information is displayed, to **CONFIRM?** all details shown press **OK**. The **BACK** softkey may be used at any time to return to the previous screen.







c) Drugs

SELECT	
ml/h	
DOSING ONLY	
DRUGS	A B C D E
	F G H I J
	K L M N O
	P Q R S T
	U V W X Y Z
SELECT WITH	
OK	QUIT

1. Select the required **DRUGS** alphabetical row from the list using the keys.
2. Press **OK** to confirm.
3. Select the drug from the displayed list using the keys, press **OK** to confirm.
4. Enter **DRUG AMOUNT** using the keys, press **OK** to confirm selection.
5. Use the keys to enter the **TOTAL VOLUME**¹, press **OK** to confirm.
6. Enter **WEIGHT**² using the keys, press **OK** to confirm.
7. A summary of the **DRUG** information is displayed, to **CONFIRM?** all details shown press **OK**. The **BACK** softkey may be used at any time to return to the previous screen.

¹Total Volume = Drug Volume + Diluent Volume i.e. Total Volume of fluid in the fluid container after a drug is added.


²Only displayed if weight based units are used.


8. Clear **VOLUME** infused , if required. This is recommended for a new patient or when a new infusion is set-up.
9. Enter **VTBI**, if required, by selecting **VTBI** softkey on main display. Set VTBI by using the **BAGS** option and/or   keys and press **OK** to confirm. Select the **END RATE** using the   keys to scroll through the on-screen choices and press the **OK** softkey to confirm.
10. Enter or adjust the **RATE**, if necessary, using the   keys.

Priming the Infusion Set




- Always prime the infusion set prior to connecting to the patient.
- The prime rate and prime volume max are configured in the data set via the Alaris Editor.
- The Pump will not prime if rate lock has been activated.
- During **PRIME**, the downstream occlusion alarm limit is temporarily increased to its maximum.

The  button allows the delivery of a limited volume of fluid in order to prime the infusion set prior to being connected to a patient.

11. Press  button to display the **PRIME** screen.
12. Press and hold the flashing **PRIME** softkey until the fluid flows and the priming of the infusion set is complete. The volume used during priming will be displayed, but it is not added to the volume infused.
13. When priming is complete release the **PRIME** softkey.


Start Infusion

14. Connect the infusion set to the patient access device.
15. Press  button to start the infusion. **INFUSING** will be displayed.

NOTE: The green run LED will flash to show that the Pump is infusing.



If the infusion requires to be stopped immediately, the following actions may be applied:

- press the  button, recommended action.
- close the roller clamp and then open the door.

Bolus

Bolus Infusions


Bolus - Administering a controlled volume of fluid or drug at an increased rate for diagnostic or therapeutic purposes. The Pump should always be infusing and always be attached to the patient (Drugs given by an IV bolus can achieve immediate and high drug concentration levels).

Bolus can be used at the start of an infusion or during an infusion.

The bolus feature can be configured via the Alaris Editor to:

- a) Bolus Mode - Disabled
- b) Bolus Mode - Enabled
 - i) HANDSON only
 - ii) HANDSON and HANDSFREE

Bolus Mode - Disabled

If configured to Disabled, pressing the  button will have no effect and the Pump will continue to infuse at the set rate.



A Bolus cannot be administered if the feature is disabled for the selected profile or drug protocol.




Bolus Mode - Enabled




During a BOLUS the downstream occlusion alarm limit is temporarily increased to its maximum.

BOLUS Enabled - HANDSON Only

In **HANDSON** bolus, press and hold the flashing Bolus softkey to deliver the required bolus. The bolus rate can be adjusted. The bolus volume is limited in the configuration via Alaris Editor.





1. During infusion press the  button once to display the **BOLUS** screen.
2. Use the   keys to adjust the bolus rate if required.
3. To deliver the bolus press and hold the flashing **BOLUS** softkey. During the bolus, the volume being infused is displayed. When the desired bolus volume has been delivered or the bolus volume max is reached, release the softkey. The bolus volume is added to the total volume infused displayed.



If the volume to be infused (VTBI) is reached during a bolus, a VTBI complete alarm or warning will sound. Press  to silence the alarm or warning. Press CANCEL to acknowledge the alert. See VTBI section for more details on VTBI operation.

BOLUS Enabled - HANDSON and HANDSFREE

The **HANDSFREE** bolus is delivered with a single press of the flashing **BOLUS** softkey. Bolus rate and bolus volume are at default values and can be changed. The default bolus volume is 0.1ml.

1. During infusion press the  button once to display the **BOLUS** screen.
2. Press the **YES** softkey to go to the **HANDSFREE** bolus screen or press **HANDSON** softkey to go to the HANDSON only bolus.
3. Use the   keys to adjust the bolus **DOSE** if required. If necessary press the **RATE** softkey to adjust the bolus delivery rate.
4. Press the flashing **BOLUS** softkey once to begin the delivery of the preset bolus. The display will show the bolus being delivered by the bolus counting down and will revert to the main display upon completion of the bolus.
5. To terminate a bolus being delivered perform one of the following:
 - Press **STOP** softkey to stop the bolus delivery and continue infusing at the set rate.
 - Press the  button to stop the bolus delivery and place the Pump on hold.

NOTE: If the bolus volume reaches the set bolus volume max the bolus will stop and the Pump will revert to infuse at the set infusion rate and continue infusing.

NOTE: Rate may be restricted by the **Bolus Rate Max** which is configured in the Alaris Editor.

NOTE: If the **BOLUS** exceeds the soft or hard limits, a prompt will display.

NOTE: The bolus rate will be automatically set to the current infusion rate, when the default bolus rate is lower than the current infusion rate. A bolus rate cannot be configured lower than the current infusion rate.

NOTE: Once the bolus rate has been set all subsequent bolus infusions will default to the previous bolus rate, until the infusion setup is cleared.

Pressure Features



- The interpretation of in-line pressure readings and occlusion alarms is the responsibility of the clinician and is dependent on the specific application.
- Default downstream occlusion alarm limits for the Pump are configured in the Alaris Editor by profile and by drug.

In-Line Pressure Monitoring


The infusion set pressure sensing disc enables the measurement of in-line pressure and in conjunction with trending graphs, can support early clinical assessment and intervention which may assist in reducing the risk of IV complications.

The downstream occlusion alarm limit set through the Auto Pressure or manual functions can assist in optimizing the time to alarm.



Despite the benefits provided by early detection of occlusions and reduced time to alarm, the Pump is not designed to provide protection from or detection of extravasation nor infiltration. Therefore, the clinician, while monitoring the pressure trend graphs, must also check the infusion site on a regular basis and follow hospital protocols when IV complications occur.

Pressure Occlusion Alarm Options

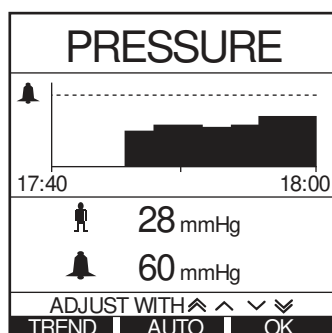

To check and adjust the downstream occlusion alarm limit press the button. The display will change to show a 20 minute pressure trend graph displaying the current patient in-line pressure and the downstream occlusion alarm limit.

The downstream occlusion alarm limit can be adjusted either manually or automatically.

Manual

The downstream occlusion alarm limit can be set manually by pressing the keys to increase or decrease the pressure alarm limits followed by the **OK** softkey. The new limit will be indicated numerically on the display screen.

Auto Pressure


The Auto Pressure feature may be used when a stable line pressure has been achieved over a short period of infusion. If Auto Pressure has been enabled in the editor, the Auto Offset value (XX)mmHg set in the profile will be used to calculate a new downstream occlusion alarm limit by pressing the **AUTO** softkey followed by the **OK** softkey.

Auto Set Pressure

If the Auto Set Pressure option is enabled, in the editor, the Pump automatically adjusts the downstream occlusion alarm limit. This occurs once, 15 minutes after the start of the infusion. The Pump automatically adjusts the downstream occlusion alarm limit to the Auto Set Value (XX) mmHg above the average infusion pressure, taken from the average of the last 5 minutes of the infusion.

Note: XX is the **AUTO OFFSET** pressure and is determined by the user. This adjustment, **AUTO OFFSET** value 15-100mmHg, is configurable by profile within the data set. At pressures up to 100mmHg the **AUTO OFFSET** value is added. For pressures above 100mmHg the downstream occlusion alarm limit is set to whatever the **AUTO OFFSET** value is as a percentage above the average infusion line pressure up to the maximum occlusion alarm limit defined within the profile.

Pressure Trend

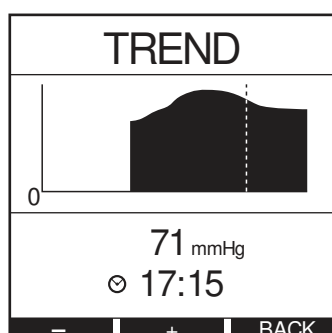

1. To check the pressure trend graph press the button.
2. Press the **TREND** softkey to view the pressure trend of the previous 12.5 hours of clock time. The pressure trend can be viewed at 15 minute intervals by using the +/- softkeys. The pressure trend is updated every 15 minutes and can be viewed with greater resolution. The pressure trend graph displays the line pressure at a given time.
3. Press the **OK** softkey to exit the pressure trend screen.

Basic Features

Clear Volume Infused







This option enables the volume infused to be cleared.

1. Press the **VOLUME** softkey on main display to show the clear **VOLUME INFUSED** option.
2. Press the **CLEAR** softkey to clear the volume infused. Press the **QUIT** softkey to retain the volume.







Setting a VTBI

This feature allows a specific volume to be infused (VTBI) to be set and the rate at which the infusion transitions after VTBI has been reached by selecting an END RATE from;

END RATE	Infusion Status	Alert	Flow Sensor Attached
STOP	Infusion stops	VTBI DONE alarm	
KVO	Infusion continues at KVO rate	VTBI DONE warning	
CONTINUE	Infusion continues at the current infusion rate	VTBI DONE warning	Yes
CONTINUE	Infusion stops	SET VTBI/INFUSION STOPPED alarm	No

1. Using the   keys:
 - a) Press the **VTBI** softkey on main display to enter the volume to be infused screen.
 - b) Enter the volume to be infused using the   keys and press **OK** to confirm.
 - c) Select the **END RATE** using the   keys to scroll through the on-screen choices.
 - d) Press the **OK** softkey to confirm and exit the **END RATE** menu.

or

2. Using the **BAGS** softkey:
 - a) Press the **VTBI** softkey on main display to enter the volume to be infused screen.
 - b) Select the **BAGS** softkey, select the required bag volume using the   keys and press **OK** to confirm the selection.
 - c) Press **OK** to confirm again, or adjust the **VTBI** using the   keys and press **OK**.
 - d) Select the **END RATE** using the   keys to scroll through the on-screen choices.
 - e) Press the **OK** softkey to confirm and exit the **END RATE** menu.

KVO (Keep Vein Open) Rate

At the end of VTBI, the Pump will first display **VTBI DONE/INFUSING KVO**. Press **CANCEL** to cancel the warning and display **KVO** screen. The Pump continues to infuse at the KVO rate. KVO is used to maintain the patency of the venous access device at the end of the infusion, preventing blood from the patient circulation entering the tip, which may result in an occlusion

NOTE: If the KVO rate, default 5ml/h, is greater than the set infusion parameters then the Pump will continue to infuse at the set infusion rate. The KVO rate will flash on screen to indicate this is not the usual infusion rate.




NOTE: The Pump will beep every 5 seconds while in KVO mode.

Selecting the Infusion Setup

This feature can enable the Pump to be set up for use with a specific drug protocol. Drugs are pre-configured in the Alaris Editor to enable rapid selection of the drug protocol, dosing units and default rate. For increased security when using a configured drug, maximum and minimum safety limits can be set for concentrations and dose rates via the Alaris Editor.



When adjusting an infusion using the dose rate, the display may not show any corresponding changes to the infusion rate in ml/h. This does not affect the accuracy of the infusion.

1. Press the  button to first access the options menu.
2. Drugs and dosing set-up options are available by selecting **INFUSION SETUP** from the list using the   keys.
3. Select from the list of the options **ml/h**, **DOSING ONLY** or **DRUGS** and press the **OK** softkey to confirm the selection. See 'Starting the Infusion' for further details.

Rate Lock


If Rate Lock is enabled, when the infusion rate has been set and the infusion started or following a bolus infusion the rate lock prompt will appear on the main display.

To select the rate lock function press the **YES** softkey. Press the **NO** softkey if the rate lock is not required.


When rate lock is enabled, the following are unavailable:

- Changing the infusion rate/titration
- Bolus/Prime
- Switching the Pump off
- VTBI over time infusions
- Secondary infusions



To turn rate lock off:

1. Press the  button to access the options menu.
2. Select **UNLOCK RATE** and press the **OK** softkey.

To turn rate lock on:

1. Press the  button to access the options menu.
2. Select **RATE LOCK** and press the **OK** softkey.




Adjusting Existing Dosing or Protocol Infusions - Set By ml/h / Set By Doserate

To set dose rate or flow rate in precise increments it may be necessary to switch between the rate adjust options **SET BY DOSERATE** and **SET BY ml/h**. An arrow to the left of the rate display shows the rate changed when the   keys are used to increase/decrease the infusion rate.




To set a dose rate precisely the arrow must be pointing to the dose rate (for example: mg/kg/h); the flow rate will be calculated from the dose rate.

To set a flow rate precisely the arrow must be pointing to flow rate ml/h; the dose rate will be calculated from the flow rate.

Set By ml/h




1. Press the  button to access the options menu.
2. Select the **SET BY ml/h** option using the   keys and press the **OK** softkey indicated on the screen. This will select the set by flowrate option, the arrow on the display will automatically select the flowrate, the flowrate can be adjusted if necessary.

Set By Doserate

1. Press the  button to access the options menu.
2. Select the **SET BY DOSERATE** option using the   keys and press the **OK** softkey indicated on the screen. This will select the set by doserate option, the arrow on the display will automatically select the doserate, the doserate can be adjusted if necessary.








Dosing Summary

To review currently selected dosing information:

1. Press the  button to first access the options menu.
2. Select **DOSING SUMMARY** option using the   keys and press the **OK** softkey.
3. Review the information and then press the **QUIT** softkey.



Add Drug

This option is only available when infusing.

1. Press the  button to access the options menu.
2. Select **ADD DRUG** option using the   keys and press the **OK** softkey.
3. Select from **DRUGS (A-Z)** from the displayed list using the   keys, press **OK** to confirm.
4. Select drug name using the   keys, press **OK** to confirm and then follow the on screen prompts as required.








Primary Setup

If a secondary infusion has already been setup, then access to the primary infusion setup is as follows:

1. Press  to put the Pump **ON HOLD**.
2. Press the  button to access the options menu.
3. Select **PRIMARY Setup** and press the **OK** softkey to confirm. Make changes to the primary setup as necessary.






Set VTBI Over Time

This option allows a specific VTBI and delivery time, maximum of 24 hours, to be set. The rate necessary to deliver the required volume within the specified time is calculated and displayed.

1. Stop the infusion. Press  button to access the options menu.
2. Select the **SET VTBI OVER TIME** option using the   keys and press the **OK** softkey.
3. Adjust the volume to be infused using the   keys or select **BAGS** softkey. When the desired volume has been reached press the **OK** softkey.
4. Enter the time over which the volume is to be infused using the   keys. The infusion rate will automatically be calculated.
5. Press **OK** softkey to enter the value or **BACK** to return to the VTBI.

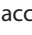Adjust Alarm Volume

This option, if enabled in the active profile, allows the user to adjust the volume level of alarms, warnings, prompts and advisories.






1. Press the  button to access the options menu.
2. Select **ADJUST ALARM VOLUME** using the   keys and press **OK** softkey to confirm.
3. Select **HIGH**, **MEDIUM** or **LOW** using the   keys.
4. Press **OK** softkey to confirm or **QUIT** to exit screen.

Alarm Volume Ramping

This option, if enabled in the active profile, configures the alarm, warning and prompt volume level to start at a low setting (sound pressure level of approximately 45 dB) and increase over time (up to approximately 20 seconds) to its **ALARM VOLUME SETTING**. It can be enabled/disabled via the Alaris Editor.

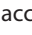


Event Log

This option allows the event log to be reviewed.

1. Press the  button to access the options menu.
2. Select **EVENT LOG** using the   keys and press **OK** softkey to confirm.
3. View the events using the   keys.
4. Select **BACK** to return to the previous screen, if required.






Pump Details

To review Pump information:

1. Press the  button to access the options menu.
2. Select **PUMP DETAILS** using the   keys and press **OK** softkey to confirm.
3. Review the information and then press the **QUIT** softkey.

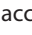Profile Filter




This option allows selected profiles to be filtered from view. It can be enabled/disabled via the Alaris Editor.

1. Press the  button to access the options menu.
2. Select **PROFILE FILTER** using the   keys, press the **OK** softkey to confirm.
3. Select profile that requires filtering using the   keys.
4. Press **MODIFY** to enable/disable profile and press **OK** to confirm or **QUIT** to return to main display.


Note: If only one profile is available and all others are disabled in this option, the **CONFIRM PROFILE** screen will not display upon start up.

Standby

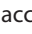This option allows the Pump to be placed on Standby mode, which sets the Pump to be on hold indefinitely, without an **ATTENTION** prompt (callback) occurring every two minutes. This is an appropriate option when an infusion Pump is set up awaiting patient admission e.g. from the Operating Theatre or Emergency Room. It can be enabled/disabled via the Alaris Editor.

1. Press the  button to access the options menu.
2. Select **STANDBY** using the   keys, press the **OK** softkey to confirm.
3. Select **CANCEL** to return to main display.

Changing the Infusion Set

1. Press  to put the Pump **ON HOLD**.
2. Close in-line clamp and ensure the access to the patient is isolated.
3. Disconnect the infusion set from the patient.
4. Open Pump door and remove infusion set from the Pump and discard the set and fluid container according to hospital protocol.
5. Prepare the new infusion set, load infusion set into Pump and close the door, see 'Loading the Infusion Set'.
6. Restart infusion, see 'Starting The Infusion'.




When changing the infusion set or the fluid container use aseptic technique according to hospital protocol.

It is recommended that infusion sets are changed in accordance with the Directions For Use.

Always read the Directions For Use supplied with the infusion set prior to use. The set change interval is generally 72 hours with the following exceptions:

- **Transfusion (Blood) Sets**

Changing the Fluid Container

1. Press  to put the Pump on hold.
2. Remove bag spike on infusion set from empty/used container. Discard empty/used container according to hospital protocol.
3. Insert the bag spike into the fluid container and hang appropriately at a minimum height of 300 mm above the Pump.
4. Fill the drip chamber approximately half full.
5. Restart infusion, see 'Starting The Infusion'.



When changing the infusion set or the fluid container use aseptic technique according to hospital protocol.

It is recommended that infusion sets are changed in accordance with the Directions For Use.

It is recommended that the air vent be opened on the Pump sets if using glass bottles or semi-rigid containers, see 'Operating Precautions' for more details.

Always read the Directions For Use supplied with the infusion set prior to use.

SmartSite™ Needle-Free System Instructions

SmartSite™ Needle-Free Valve is designed to permit safe gravity flow and automated flow, injection and aspiration of fluids without the use of needles by utilising Luer lock and Luer slip connectors.




Precautions:

- **Discard if packaging is not intact or protector caps are unattached.**
- **If Needle-Free Valve is accessed by a needle in an emergency the valve will be damaged causing leakage. Replace Needle-Free Valve immediately.**
- **Needle-Free Valves are contraindicated for blunt cannula system.**
- **Do not leave slip Luer syringes unattended.**

Directions - Use Aseptic Technique

1. Prior to every access, swab top of Needle-Free Valve port with a sterile 2% chlorhexidine, 70% alcohol wipe or other approved antiseptic and allow to dry.

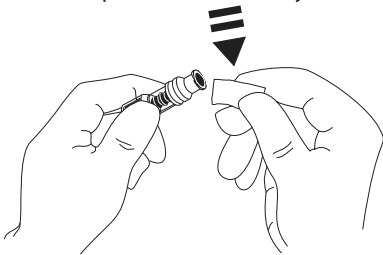

NOTE: Dry time is dependent on temperature, humidity and ventilation of the area.

2. Prime valve port. If applicable, attach syringe to Needle-Free Valve port and aspirate minuscule air bubbles.
3. When used with infusion sets always refer to individual set Directions For Use as change interval may vary according to clinical application (e.g. infusions of blood, blood products, and lipid emulsions).

NOTE: During use of Needle-Free Valve port, fluid may be observed between the housing and blue piston. This fluid does not enter the fluid path and requires no action.

NOTE: For product questions or needle-free valve educational materials, contact your CareFusion representative. Consult facility protocols. Consult other organizations that publish guidelines useful in developing facility protocols.

Secondary (Piggyback) Infusions


Secondary, or piggyback, Infusion mode is only available if it has been configured.

The application of secondary infusions should be limited to the intermittent therapy of medications which are not sensitive to the total time required to complete an infusion.



- Typically antibiotics may be infused using a secondary infusion, where the primary infusion is limited to maintenance fluid. If intending to use the secondary infusion facility, the primary infusion should be a maintenance fluid only and is not indicated for drug therapy.
- The application of secondary infusions for delivery of critical drugs, particularly those with a short half life, is not indicated for use. These drugs should be administered through a dedicated Pump channel.
- Flow may occur from the primary fluid container during a secondary infusion, dependent upon factors such as fluid viscosity, the secondary infusion rate, head height between both fluid containers and the use of clamps. This could result in drug remaining in the container at the end of the secondary infusion, delaying its delivery for a period of time which is dependent upon the primary infusion rate. Therefore it is recommended that flow sensors, if used, are disconnected from the Pump during secondary infusions.
- Regular monitoring for unexpected primary flow is recommended. If flow from the primary fluid container is not desired during secondary infusion and/or the patient is sensitive to fluid balance, the clamp on the primary infusion set should be closed. Check that no drops fall in the primary drip chamber.
- On completion of the primary infusion the Pump will continue at Keep Vein Open (KVO) rate.

Typical Secondary infusions

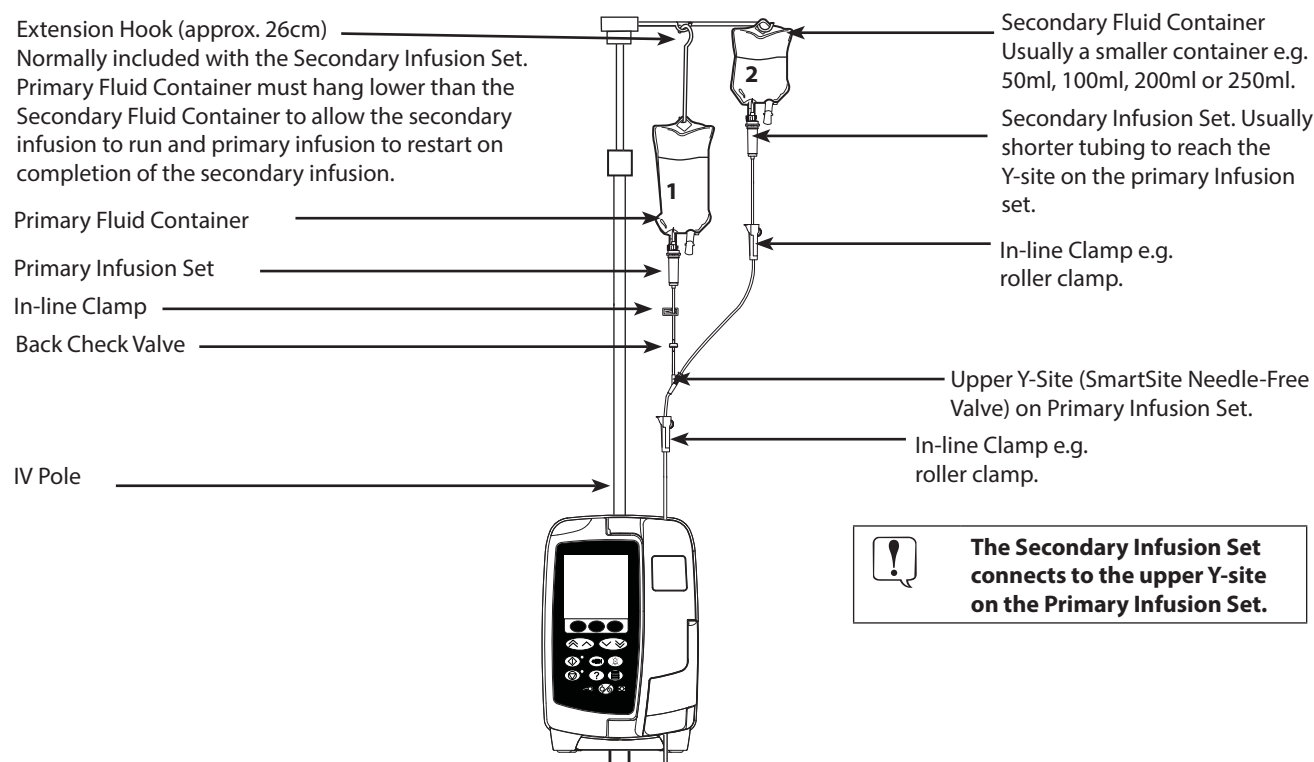

Setting up a secondary infusion

1. Ensure Primary infusion has been setup in ml/h.
2. Press to put the Pump **ON HOLD**.
3. Press to access the **OPTIONS** screen.
4. Select **SECONDARY SETUP**. Press **OK** to confirm.
5. Select either **ml/h** or **DRUGS A-Z**. Press **OK** to confirm either selection.
6. Enter the secondary **RATE** using the keys. Press **OK** to confirm.
7. Set **VTBI** using the keys. Press **OK** to confirm.
8. Review **PRIMARY/SECONDARY** setup summary. If correct, press **OK** to continue, or **BACK** to adjust **VTBI** or **RATE** of the **SECONDARY** mode.
9. Press to start the infusion in secondary mode. An advisory screen will be displayed - **ENSURE SECONDARY INFUSION SET OPEN**.
10. Press **OK** to start infusing at the displayed rate.

On completion of the secondary VTBI, the Pump will automatically transition to the primary infusion, an audible beep will be heard.

Service Configuration Mode

This section comprises of a list of options which can be configured. Some can be entered via the Pump **SERVICE** menu, available in Technician Mode, and others through the Alaris Editor Software.



Access codes should only be entered by Qualified Service Personnel.

Alarm Presets

Pumps with version 1.2.x software have 2 alarm tones to choose from during configuration:

- Single tone: Low, medium and high priority alarm tones in accordance with IEC 60601-1-8: 2012 and IEC 60601-2-24:2012
- Classic tone: Low, medium and high priority alarm tones that sound like the auditory alarms and warnings from software versions prior to 1.2.x

Enter the access code on the Pump for Alarm Presets, see the *Technical Service Manual* or *Information Notice* for details. The alarm preset default is single tone alarms in accordance with IEC 60601-1-8: 2012 and IEC 60601-2-24:2012.

1. Use the keys to select alternative alarm tones.
2. When the desired alarm tone has been selected press **OK** softkey.
3. When all modifications have been carried out press **QUIT** softkey.



All pumps in a single care area should be configured with the same alarm tones to avoid User confusion. The Hospital/Facility is responsible for selecting and configuring the desired alarm scheme. Alaris Gateway Workstation (Workstation) with software versions 1.1.3, 1.1.3 MR, 1.1.5, 1.2 or 1.5 do not support the new Pump low priority visual alarms scheme defined in IEC 60601-1-8: 2012. For Pumps with version 1.2.x software or higher docked into these Workstations there will be a mismatch of alarm priority displayed. As a result, Near End Of Infusion, AC Power Fail, Add Drug Not Complete, and Attention alarms will display as a medium visual priority alarms on the Workstation beacon and a low priority alarm on the Pump. Additionally, for certain information signals, e.g. those associated with Add Drug Not Complete and Titration Not Confirmed, the Workstation beacon will illuminate while the beacon on the pump will not. In the event of an alarm priority mismatch, the User should refer to the alarm on the Pump for the correct priority.

Configured Options

Enter the access code on the Pump for **SERVICE** mode, then select **CONFIGURATION**, see the *Technical Service Manual* for details.

Use Alaris Editor to configure the Pump configuration, drug library and units enabled for each data set.

Date and Time

1. Select **DATE & TIME** from the **CONFIGURATION** menu using the keys and press the **OK** softkey.
2. Use the keys to adjust the date displayed, pressing the **NEXT** softkey to access the next field.
3. When the correct date and time are displayed press the **OK** softkey to return to the **CONFIGURATION** menu.
4. Press the **QUIT** softkey to return to the **SERVICE** menu and press to exit and power down.

Pump Reference

This option is used to add reference text to be shown on the Pump start up display.

1. Select **PUMP REFERENCE** from the **CONFIGURATION** menu using the keys and press the **OK** softkey.
2. Use the keys to enter the text and **NEXT** to move to the next character.
3. When the desired text has been selected press **OK** softkey to return to the **CONFIGURATION** menu.
4. Press **QUIT** to exit back to the main **SERVICE** menu and press to exit and power down.






Language

This option is used to set the language of messages shown on the Pump display.

1. Select **LANGUAGE** from the **CONFIGURATION** menu using the keys and press the **OK** softkey.
2. Use the keys to select the language.
3. When the desired language has been selected press **OK** softkey to return to the **CONFIGURATION** menu.
4. Press **QUIT** to exit back to the main **SERVICE** menu and press button to exit and power down.

Backlight and Contrast

This option is used to set the backlight and contrast on the Pump display.

1. Select **BACKLIGHT & CONTRAST** from the **CONFIGURATION** menu using the   keys and press the **OK** softkey.
2. Use **PARAM** to select either **BACKLIGHT**, **CONTRAST** or **DIMMING**, as required.
3. Use the   keys to adjust.
4. When the desired value has been reached press the **OK** softkey, then **QUIT** to get back to the **SERVICE** menu and press  to exit and power down.

Pump Configuration available via the Alaris Editor Software

The following options are only configurable via the PC based Alaris Editor Software, see Alaris Editor help files for further details.

Data Set Configuration Settings

Profile Filtering	Controls whether the user is able to filter which profiles will be available on the Pump.
Unit Display	The text used to display units.

General Pump Configuration Settings

AC Fail Warning	Controls whether, when main power has been disconnected, a warning is generated to inform the user that the Pump is operating solely on battery power.
Audio Volume	Controls the audio volume used for alarms, warnings and prompts.
Audio Volume Adjustable	Controls whether the user is able to adjust the audio volume setting.
Auto Night Mode	Controls whether, between defined times, the Pump makes changes consistent with usage at night, e.g. dimmed backlight.
Auto save	Controls whether, when the Pump is powered down, the active infusion settings are preserved for restoration at the next power-up.
Battery Icon	Controls whether or not the battery icon, which indicates state of charge, is displayed.
Callback Time	Controls the time that is allowed to elapse between the user's last recorded interaction with the Pump and generation of an ATTENTION prompt.
Drug Override Mode	Always - Any changes made to the dose rate that are outside of the Guardrails Soft Alerts will require confirmation before starting infusion. Smart – Confirmation of setting will be required on first dose rate set outside of the Guardrails Soft Alert. Any subsequent changes will not require confirmation until after the dose rate has been confirmed inside the Guardrails Soft Alert limits.
Event Log	Controls whether or not it is possible for the user to inspect the contents of the event log using the Pump's display and keypad.
Pressure Display	Option not available as Pressure Display is always enabled.
Quiet Mode	Controls whether or not the Pump operates in a mode whereby generation of sound is minimised, by turning off the key clicks.
Rate Lock	Controls whether the Rate Lock feature is available for use.
Rate Titration	Allows the adjustment of the infusion rate while the Pump is infusing, without putting the Pump on hold.
Standby Mode	Controls whether or not standby mode is available on the Pump.
VTBI Clear Rate	Controls whether or not the Pump forces the user to define a new rate following completion of delivery of a previous VTBI.
Weight Default	Set the default patient weight.
Weight Soft Min	Set the minimum patient weight for weight-based drug dosing calculations before alerting the user.
Weight Soft Max	Set the maximum patient weight for weight-based drug dosing calculations before alerting the user.

Large Volume Pump Configuration Settings

Air Limit	Set the single bubble Air-in-line alarm.
Bolus Mode	Controls whether or not the Pump allows bolus delivery method.
Bolus Rate Default	Set the default value for bolus rates.
Bolus Rate Max	Set the maximum permissible bolus rate.
Bolus Volume Max	Set the maximum permissible bolus volume.
Infusion Rate Max	Set the maximum permissible infusion rate.
KVO Rate	Set the maximum infusion rate when performing KVO delivery.
Near End of Infusion Point	Set the point defined in terms of remaining time at which the infusion is deemed to be <i>Near end</i> i.e. nearly complete.
Primary VTBI Max	Set the maximum VTBI for primary infusions.
Prime Rate	Set the rate at which priming is performed.
Prime Volume Max	Set the maximum volume that can be purged as part of a given prime operation.
Secondary Infusion	Allows the use of a secondary infusion in the same channel.
Sec. Infusion Rate Max	Set the maximum permissible infusion rate for secondary infusions.
Sec. VTBI Max	Set the maximum permissible setting for the Volume To Be Infused for secondary infusions.
Downstream Occlusion Alarm Pressure	Sets the default downstream occlusion alarm limit.
Downstream Pressure Maximum	Sets the maximum permitted downstream occlusion alarm limit.
Auto Pressure	Controls the setting of the downstream occlusion alarm limit offset above the measured pressure at that moment.
Auto Set Pressure	Controls whether the downstream occlusion alarm limit can be set automatically.
Auto Offset	When the downstream occlusion alarm limit is set automatically, this value is the amount added to the stable running downstream pressure to set the limit.
Alarm Volume Ramping	Controls whether the alarm volume ramping feature is enabled, which controls whether the alarm, warning or prompt volume increases over time.
Disable Near End Of Infusion	Controls whether the Near End of Infusion warning is disabled.

Drug Library available via the Alaris Editor Software

The following drug parameters are only configurable via the PC based Alaris Editor Software, see Alaris Editor help files for further details.

Concentration Settings

Concentration Units	The unit for concentration parameters.
Concentration Min	The weakest permissible concentration for this drug.
Concentration Max	The strongest permissible concentration for this drug.

Dose Rate Settings

Dose Rate Units	The unit for dose rate parameters.
Weight based units	Controls whether weight based units are enabled or disabled for use.
Dose Rate Default	The default dose rate for infusing this drug.
Dose Rate Soft Min	The minimum permissible dose rate which does not generate an alert on the Pump.
Dose Rate Soft Max	The maximum permissible dose rate which does not generate an alert on the Pump.
Dose Rate Hard Max	The maximum permissible dose rate for infusing this drug.

Bolus Settings

Bolus Mode	Controls bolus delivery method. These settings override the Pump configuration settings in the profile.
Bolus Dose Units	The unit for bolus dose parameters. Applies to Hands-on and Hands-free bolus.
Weight based units	Controls whether weight based units are enabled or disabled for use.
Bolus Dose Default	The default bolus dose for this drug. Applies to Hands-free bolus.
Bolus Dose Soft Min	The minimum bolus dose that the Pump allows before the user is required to confirm the selected bolus dose in response to an advisory of the possibility of under-infusion. Applies to Hands-free bolus.
Bolus Dose Soft Max	The maximum bolus dose that the Pump allows before the user is required to confirm the selected bolus dose in response to an advisory of the possibility of over-infusion. Applies to Hands-free bolus.
Bolus Dose Hard Max	The maximum permissible bolus dose for this drug. Applies to Hands-on and Hands-free bolus.
Bolus Rate Default	The default bolus rate for this drug.

Pressure Settings

Occlusion Alarm Pressure	The downstream occlusion alarm limit can be set from 0-800mmHg.
---------------------------------	---

Display of Units

Units are selected via the Alaris Editor.

Micrograms can be displayed as mcg or µg depending upon the configuration in the Alaris Editor.

Units can be displayed as U or units depending upon the configuration in the Alaris Editor.

Alarms

Alarms vary by priority and are indicated on the Pump in the following manner:

Alarm Priority Level Indicators

Priority	Audio Indicator	Visual Indicator (Beacon)
HIGH	Ten beep sequence followed by a three second pause	Flashing Red
MEDIUM	Three consecutive beeps followed by a four second pause	Flashing Amber
LOW	Three consecutive beeps followed by a sixteen second pause	Solid Amber

Note: The audio sound pressure level is at least 45 dB depending on configuration of the alarm sound level.





Setting the alarm sound pressure level lower than the ambient sound pressure level can impede User recognition of alarm conditions.


Note: The alarm audio described here is for the *Single Tone* alarm preset configuration. An alternative *Classic Tone* scheme is also available to sound similar to Pumps using older software versions, prior to 1.2.x.

High Priority Alarms

High priority alarms stop the infusion and are indicated by a combination of an audible sound, flashing red alarm indicator and a message on the display. See the 'Alarm Priority Level Indicators' table above for more details on how high priority alarms are indicated.

Alarms can be addressed in the following manner:

1. Check the display for an alarm message and review table below for cause and action. Press  to silence the sound for 2 minutes, or press a second time to re-enable alarm audio, **CANCEL** to clear the message. The **CANCEL** feature clears the alarm signal, but the signal will return if the alarm condition still exists.
2. When the cause of the alarm has been rectified, press the  button to resume the infusion. (Exceptions are **DO NOT USE** and **BATTERY EMPTY**)

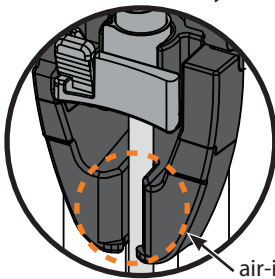Display	Cause	Action
AIR-IN-LINE*	Single air bubble exceeds alarm limit. Set not fitted correctly into air-in-line detector.	<ul style="list-style-type: none"> • Ensure set is fitted correctly in the air-in-line detector.  <p>air-in-line detector</p> <ul style="list-style-type: none"> • Inspect infusion set for air bubbles and take appropriate action. • Remove air according to hospital policy. • Check fluid level in container. • Check fluid level in drip chamber. • Restart infusion.
AIR-IN-LINE*	Accumulated air bubbles have exceeded alarm limit. Multiple bubbles smaller than the single bubble alarm limit, have been detected at >1ml over a rolling 15 minute window period.	<ul style="list-style-type: none"> • Inspect infusion set for air bubbles and take appropriate action. • Remove air according to hospital policy. • Check fluid level in container. • Check fluid level in drip chamber. • Restart infusion.
DOOR OPEN	Door was opened during an infusion.	<ul style="list-style-type: none"> • Close door or clamp infusion set using roller clamp. • Restart infusion.
DOWNSTREAM OCCLUSION	A blockage has occurred downstream.	<ul style="list-style-type: none"> • Check fluid path between Pump and patient for clamps, connectors, kinks or blockages. • Examine access site for signs of complications e.g. redness, swelling, pain, heat.

Display	Cause	Action
UPSTREAM OCCLUSION	A blockage has occurred upstream. Possible container empty.	<ul style="list-style-type: none"> Check that the fluid container is at a minimum height of 300mm above the pump. Ensure the bag spike is fully inserted into the fluid container and not obstructed. Ensure the fluid container is not empty. Ensure air vent on drip chamber is open on all glass and semi rigid containers. Check there are no kinks in the infusion sets above the Pump. Check all infusion set clamps above the Pump are fully open. Check fluid level in the drip chamber. Open the Pump door and ensure the infusion set is loaded correctly. Consider if the 15µm filter in the drip chamber is blocked or partially blocked. Ensure the infusion set has not been used for more than 72 hours. If alarm continues consider changing the infusion set.
NO FLOW	Flow sensor detects no flow.	<ul style="list-style-type: none"> Check flow sensor. Check fluid level in container. Ensure all clamps above Pump are open. Check fluid level in drip chamber. Ensure that the bag spike is inserted correctly. Check flow sensor is clean.
FLOW ERROR	Gross difference between detected drops and expected amount of drops.	<ul style="list-style-type: none"> Clamp infusion set using roller clamp. Check flow sensor. Check fluid level in drip chamber.
FLOW ERROR (In secondary infusion mode only)	Unexpected drops detected.	<ul style="list-style-type: none"> Hang secondary container above primary. Check drops are from secondary container when infusing. Flow sensor disconnection is recommended.
FREE FLOW	Uncontrolled flow possible.	<ul style="list-style-type: none"> Clamp infusion set using roller clamp. Remove Pump from use.
BATTERY EMPTY	The internal battery is exhausted. The Pump will automatically switch off in the immediate future.	<ul style="list-style-type: none"> Switch Pump off and connect to AC power supply immediately.
SAFETY CLAMP	Safety clamp broken or missing.	<ul style="list-style-type: none"> Clamp infusion set using roller clamp. Replace infusion set. Investigate and correct set loading.
SET MISLOAD	Set loaded incorrectly.	<ul style="list-style-type: none"> Clamp infusion set using roller clamp. Investigate and correct set loading.
FLOW SENSOR DISCONNECT	Flow sensor unplugged during infusion.	<ul style="list-style-type: none"> Check/replace flow sensor or set VTBI.
WRONG SET	Safety clamp not detected.	<ul style="list-style-type: none"> Clamp infusion set using roller clamp. Check set and close door. Replace infusion set as required.
DOOR CLOSE INCOMPLETE	Safety clamp in non-occluded position with door open or obstructed.	<ul style="list-style-type: none"> Clamp infusion set using roller clamp. Investigate and correct set loading. Close door.
DO NOT USE	Internal error has occurred.	<ul style="list-style-type: none"> Remove Pump from use.
LEVER OPEN	Door lever is open.	<ul style="list-style-type: none"> Check door lever. Check lever hooks. Check lever is not obstructed, if so, free obstruction.
VTBI DONE	Intended VTBI completed. When STOP selected as the END RATE .	<ul style="list-style-type: none"> Set new VTBI or clear VTBI.

Display	Cause	Action
ATTENTION	Pump left on hold for 2 minutes after first ATTENTION warning.	<ul style="list-style-type: none"> Review Pump setup. Start infusion or turn off Pump.
SET CLOCK	Date/time not set.	<ul style="list-style-type: none"> Qualified Service Personnel must set date/time. Press cancel softkey to continue.
SET SERIAL NUMBER	Serial number not set.	<ul style="list-style-type: none"> Contact Qualified Service Personnel to set the serial number.




*** Restarting an Infusion following an Air-in-Line Alarm**

The Pump may be restarted by opening the door, assessing and removing any air from the tubing guide area and in the infusion set on the patient side of the Pump, if required, according to hospital policy. Close the door and cancel the air-in-line alarm. Restarting the infusion will reactivate the air-in-line system and will alarm if the preset air-in-line limit is exceeded.

Medium Priority Alarms


Medium priority alarms alert the user but may not stop the infusion and are indicated by an audible sound, a flashing amber warning indicator and a message on the display. See the 'Alarm Priority Level Indicators' table above for more details on how medium priority alarms are indicated.




1. Check the display for a warning message. Press  to silence the sound for 2 minutes, or press a second time to re-enable alarm audio, **CANCEL** to clear the message.
2. Rectify the cause of the alarm or proceed with caution.

Display	Cause	Action
BATTERY LOW	Low battery threshold sensed; remaining battery run time is limited; if cancelled will reoccur every ten minutes if not plugged in.	<ul style="list-style-type: none"> Connect to power supply. Check power cable.
VTBI DONE (KVO/Continue)	Intended VTBI completed. When KVO or CONTINUE are selected as the END RATE .	<ul style="list-style-type: none"> Set new VTBI or clear VTBI.
AIR-IN-LINE	Air detected in infusion set at the start of infusion. Set not fitted correctly into air-in-line detector.	<ul style="list-style-type: none"> Ensure set is fitted correctly in the air-in-line detector. Assess air in infusion set. Check fluid level in drip chamber. Check fluid level in container.
TITRATION	Rate titration not confirmed. Note: After five seconds the User will be notified by an auditory cue. After two minutes have expired a medium priority alarm is generated.	<ul style="list-style-type: none"> Confirm or cancel new rate.
LOG FAILURE	Unable to update event log.	<ul style="list-style-type: none"> Qualified Service Personnel may need to service the Pump.
SET NOT FITTED	No infusion set fitted.	<ul style="list-style-type: none"> Fit infusion set.
SET VTBI	Intended VTBI not set.	<ul style="list-style-type: none"> Set new VTBI.

Low Priority Alarms

Low priority alarms alert the user but may not stop the infusion and are indicated by an audible sound, a solid amber warning indicator and a message on the display. See the 'Alarm Priority Level Indicators' table above for more details on how low priority alarms are indicated.

1. Check the display for message. Press  to silence the sound for 2 minutes, or press a second time to re-enable alarm audio, **CANCEL** to clear the message.
2. Rectify the cause of the alarm or proceed with caution.

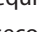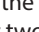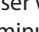Display	Cause	Action
ATTENTION	Pump left on hold for 2 minutes* without starting the infusion.	<ul style="list-style-type: none"> Review Pump setup. Start infusion or turn off Pump.
AC POWER FAIL	AC power disconnected or failed.	<ul style="list-style-type: none"> Reconnect to power supply.
ADD DRUG	Drug selection required. Note: After five seconds the User will be notified by an auditory cue. After two minutes have expired a low priority alarm is generated.	<ul style="list-style-type: none"> Press  to access options menu. Select DRUGS A-Z using the   keys. Press OK to confirm.
RATE LOCK	Rate lock not confirmed. Note: After five seconds the User will be notified by an auditory cue. After two minutes have expired a low priority alarm is generated.	<ul style="list-style-type: none"> Select YES or NO as required.
NEAR END OF INFUSION	Less than XX minutes, which is configurable, of infusion remaining.	<ul style="list-style-type: none"> Set new VTBI. Prepare new fluid container.

* Configurable option

Prompts

Prompts are indicated by an audible alarm and message, they cannot be silenced and do not have a visual indicator.

Display	Cause	Action
SET VTBI	No VTBI/flow sensor.	<ul style="list-style-type: none"> Set VTBI or fit flow sensor.
LOCKED	Rate change attempted while locked.	<ul style="list-style-type: none"> Unlock rate to adjust infusion settings.
KVO	Occurs after a VTBI DONE warning is cancelled if KVO was selected as the END RATE setting.	<ul style="list-style-type: none"> Set new infusion or stop treatment

Advisories

Advisories alert the user and are indicated by an audible sound and a message on the display.


Display	Cause	Action
DOSE WOULD EXCEED	Infusion rate set exceeds a Guardrails soft limit.	<ul style="list-style-type: none"> • Check infusion setting. • To confirm OVERRIDE LIMIT? press YES. • To deny OVERRIDE LIMIT? press NO.
DOSE UNDER	Infusion rate/dose rate set is under a Guardrails soft limit.	<ul style="list-style-type: none"> • Check infusion setting. • To confirm OVERRIDE LIMIT? press YES. • To deny OVERRIDE LIMIT? press NO.
DOSE NOT PERMITTED	Dose rate entered is greater than the dose rate hard maximum set.	<ul style="list-style-type: none"> • Check infusion setting and adjust to appropriate required rate.
RATE NOT PERMITTED	Infusion rate set exceeds a hard limit.	<ul style="list-style-type: none"> • Check infusion setting and adjust to appropriate required rate.
CONCENTRATION NOT PERMITTED	Concentration set exceeds hard max limit, or is under hard minimum limit.	<ul style="list-style-type: none"> • Check concentration and adjust to a more appropriate amount.
WEIGHT ABOVE LIMIT	Patient weight set exceeds a Guardrails soft limit.	<ul style="list-style-type: none"> • Check weight setting. • To confirm OVERRIDE LIMIT? press YES. • To deny OVERRIDE LIMIT? press NO.
WEIGHT BELOW LIMIT	Patient weight set is under a Guardrails soft limit.	<ul style="list-style-type: none"> • Check weight setting. • To confirm OVERRIDE LIMIT? press YES. • To deny OVERRIDE LIMIT? press NO.
BOLUS DOSE NOT PERMITTED	Bolus dose rate entered is greater than the bolus dose rate hard maximum limit.	<ul style="list-style-type: none"> • Check the bolus setting and adjust to a more appropriate dose.
BOLUS DOSE WOULD EXCEED	Bolus dose rate set exceeds a Guardrails soft limit.	<ul style="list-style-type: none"> • Check the bolus setting. • To confirm OVERRIDE LIMIT? press YES. • To deny OVERRIDE LIMIT? press NO.
BOLUS DOSE UNDER	Bolus dose rate set is under a Guardrails soft limit.	<ul style="list-style-type: none"> • Check the bolus setting. • To confirm OVERRIDE LIMIT? press YES. • To deny OVERRIDE LIMIT? press NO.

Flow Sensor Operation (Optional)



The flow sensor automatically monitors the infusion flow rate through the drip chamber. The flow sensor will cause the Pump to alarm if a significant deviation from the infusion rate occurs. The flow sensor will also be able to detect empty containers. For this reason we recommend use of a flow sensor wherever possible excluding secondary infusions.

IVAC™ Model 180 Flow Sensor

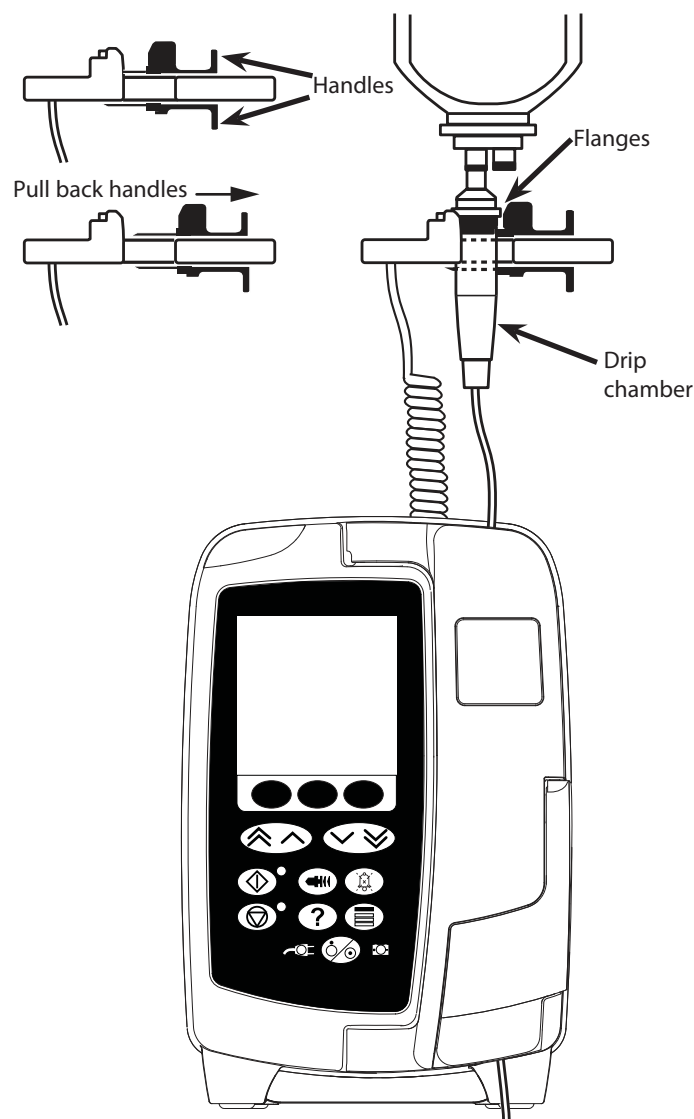

1. Remove the Flow Sensor Interface Cover and store for future use.
2. Plug the flow sensor into the flow sensor interface located on the top rear part of the Pump.
3. Attach the IVAC™ Model 180 Flow Sensor to the drip chamber of the infusion set, by pulling back the handles. Refer to the illustration above.
4. Proceed with load, priming, and set-up instructions as described in this Directions For Use.


NOTE: Ensure drip chamber is half full and upright.



Always attach the flow sensor before starting an infusion.
Avoid using the flow sensor in direct sunlight.
Always ensure lens is clean.



Always replace the Flow Sensor Interface Cover when the flow sensor is disconnected.

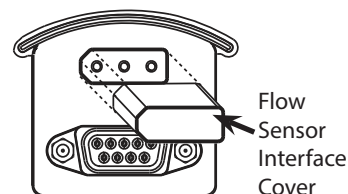

Specifications

Electrical Protection

Class I, Type CF (Defibrillation-proof)

Electrical/Mechanical Safety

Complies with IEC/EN60601-1 and IEC/EN60601-2-24

Potential Equalisation Conductor

The function of the Potential Equalisation Connector (Conductor) is to provide a direct connection between the Pump and the potential equalisation busbar of the electrical installation. To use the Potential Equalisation Connector, connect the Potential Equalisation Connector on the Pump to the potential equalisation busbar of the electrical installation.

Electro Magnetic Compatibility (EMC)

Complies with IEC/EN60601-1-2 and IEC/EN60601-2-24

Electrical Safety

Typical Earth Leakage Current (Normal Condition) = 78µA*

Typical Enclosure Leakage Current (Normal Condition) < 1µA*

Typical Protective Earth Resistance = 32mOhms (excluding power cable)

The above measurements are for guidance only, IEC/EN60601-1 limits are defined below:

Earth Leakage Current (Normal Condition) <= 500µA

Enclosure Leakage Current (Normal Condition) <= 100µA

Protective Earth Resistance <= 200mOhms (power cable)

* measured at 230 + 10% VAC, 60Hz

Classification

Continuous mode of operation, Portable Equipment

AC Power Supply

100 - 230VAC, 50 - 60Hz, 60VA (Maximum)

Dimensions

148mm (w) x 225mm (h) x 158mm (d). Weight: approximately 2.6kg (excluding power cable).

Protection Against Fluid Ingress

IP33 - Protected against direct sprays up to 60° from the vertical

Environmental Specifications

Condition	Operating	Transport and Storage
Temperature	+0°C - +40°C	-20°C - +50°C
Humidity	20% - 90%*	15% - 95%*
Atmospheric Pressure	700hPa - 1060hPa	500hPa - 1060hPa

*Non condensing

Battery Specifications

Rechargeable NiMH (Nickel Metal Hydride). Automatically charges when the Pump is connected to AC power.

- Battery Run Time - For a 24 hour battery charge time, the Pump at 25ml/h will have a Mean Time To Battery Empty of 5.5 hours.
- Battery Charging - 2.5 hours to 95%.

Infusion Rate	Mean Time To Battery Empty from fully charged
25ml/h	6.75 hours
125ml/h	6.5 hours
1200ml/h	4 hours

Memory Retention

The electronic memory of the Pump will be retained for at least 2 years with normal use.

System Accuracy

The System includes the Pump and any of the compatible Infusion Sets available from CareFusion.

Rate Accuracy is $\pm 5\%$, achieved under nominal conditions^{1a,2}

Rate Accuracy is $\pm 10\%$, achieved under low flow conditions^{1b,2}



Variations of container head height, outlet back pressure or any combination of these can affect mean rate accuracy. Factors that can influence container head height and outlet back pressure are: Flow rate, catheter length and inner diameter, administration set length and inner diameter, container fill level and pump level, IV solution viscosity, and IV solution temperature. The Notes under this section of the Directions For Use provide quantitative data on the influences of intake and outlet pressures on mean flow rate.

Downstream Occlusion Alarm Pressure

Occlusion pressure is adjustable from 1mmHg to 800mmHg in 1mmHg increments.

Occlusion Accuracy achieved under nominal conditions^{1a}

The downstream occlusion pressure accuracy can vary dependent upon temperature, with the table below showing the accuracy as % Full Scale Deflection.

		Pressure (mmHg)			
		1	25	500	800
Temperature	23°C	$\pm 2\%$	$\pm 4\%$	$\pm 5\%$	$\pm 6\%$
	5°C	$\pm 4\%$	$\pm 7\%$	$\pm 7\%$	$\pm 10\%$
	40°C	$\pm 4\%$	$\pm 7\%$	$\pm 7\%$	$\pm 10\%$

Note: The Pump does not display negative pressure values.

Maximum Pumping Pressure

880mmHg

Post Downstream Occlusion Bolus



The management of post occlusion bolus is the responsibility of the clinician and must be determined for each situation.

Bolus volume generated at 25ml/h when the minimum downstream occlusion alarm limit is reached <0.06ml

Bolus volume generated at 25ml/h when the maximum downstream occlusion alarm limit is reached <0.70ml

Bolus Volume Accuracy

Typical: -1.9%, Max: 4.1%, Min: -10.1% 1ml at 10ml/h

Typical: 0.4%, Max: 1.8%, Min: -1.4% 100ml at 1200ml/h

Typical Time for Activation of the Downstream Occlusion Alarm

		Downstream Occlusion Alarm Pressure		
		1mmHg	30mmHg	800mmHg
Infusion Rate	0.1ml/h	90 sec	23 min	12 hours
	1ml/h	100 sec	165 sec	55 min
	25ml/h	11 sec	13 sec	100 sec
	100ml/h	2 sec	4 sec	20 sec

Typical time with a low priming volume set (70096)

		Downstream Occlusion Alarm Pressure		
		1mmHg	30mmHg	800mmHg
Infusion Rate	0.1ml/h	100 sec	12 min	90 min
	0.5ml/h	75 sec	3 min	20 min
	1ml/h	5 sec	71 sec	10 min
	10ml/h	3 sec	10 sec	50 sec
	25ml/h	2 sec	7 sec	21 sec

Administering a Bolus

Parameter	Range
Bolus Rate	10 - 1200ml/h in steps of 10ml/h
Bolus Volume Displayed	0.0ml - 100.0ml in steps of 0.1ml

Starting the Infusion/Set up

Infusion Parameter	Range
Infusion Rate	0.1 - 99.9ml/h in steps of 0.1ml/h
	100 - 999ml/h in steps of 1ml/h
	1000 - 1200ml/h in steps of 10ml/h
VTBI Primary	(0 - OFF), 1 - 9999ml
VI (Total)	0.1 - 9999ml

Air Sensor

Integral Ultrasonic Sensor.

Critical Volume

The maximum volume infused following a single fault condition is for rates $\leq 10\text{ml/h}$: 0.25ml, rates $\leq 100\text{ml/h}$: 0.5ml, rates $> 100\text{ml/h}$: 2ml

The Alaris Safety Clamp

Set based, Pump activated Safety Clamp Device to prevent free flow

Air-in-line detection

Single Bubble: 50 μl , 100 μl , 250 μl or 500 μl .

Bubble accumulation: 1ml over a 15 minute window.

Single Bubble	Air-in-line detector accuracy (Nominally):
50 μl	54 $\mu\text{l} \pm 1\mu\text{l}$
100 μl	108 $\mu\text{l} \pm 1\mu\text{l}$
250 μl	262 $\mu\text{l} \pm 2\mu\text{l}$
500 μl	514 $\mu\text{l} \pm 2\mu\text{l}$

Achieved under nominal conditions^{1a}

Notes

1a. Nominal conditions are defined as:

- Set Rate: 1 to 1200ml/h
- Recommended infusion set: 70593
- Needle: 18gauge x 40mm
- Solution Type: De-ionized and Degassed Water
- Temperature: 23°C \pm 2°C
- Fluid Head Height: +300 \pm 10mm
- Back Pressure: 0 \pm 10mmHg
- Atmospheric Pressure : 1010hPa \pm 10 hPa

1b. Low flow conditions are defined as:

- Set Rate: less than 1.0ml/h
- Recommended infusion set: 70593
- Needle: 18gauge x 40mm
- Solution Type: De-ionized and Degassed Water
- Temperature: 23°C \pm 2°C
- Fluid Head Height: +300 \pm 10mm
- Back Pressure: 0 \pm 10mmHg
- Atmospheric Pressure : 1010hPa \pm 10 hPa

2. The system accuracy will change by the following percentages:


- Temperature: nominally -1.1% at 5 °C and nominally -1.6% at 40 °C
- Fluid Head Height: nominally -2.55% at -380mm and 0.0% at +500mm
- Duration: nominally -0.15% over 24 hours of continuous use
- Back Pressure: nominally +1.27% at -100mmHg, +0.1% at +100mmHg respectively
- Atmospheric pressure: \pm 5% at 125ml/h at 500hPa and 1060hPa
- Solution Type: nominally -1.53% (0.9% Normal Saline); nominally -2.35% (50% Dextrose); nominally -1.53% (20% Lipids); nominally -1.04% (5% Alcohol)-1.04% with 5% Alcohol



The specified accuracy may not be maintained if the above conditions are not met, see notes 1 to 2.


Associated Products

The Alaris Gateway Workstation

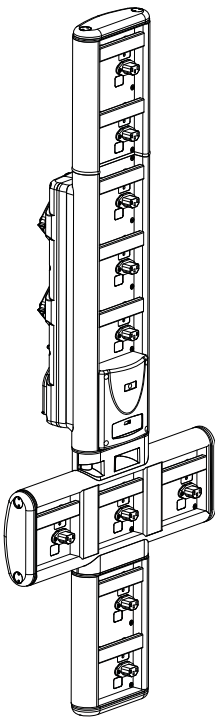

Product SKU	80203UNS0y-xx
Supply Voltage	115-230VAC, ~50-60Hz
Electrical Rating	460VA (Maximum)
Protection Against Electrical Shock	Class 1
Classification	Continuous Operation
Supply to Pump	115-230V, ~50-60Hz, 60VA

The Alaris DS Docking Station

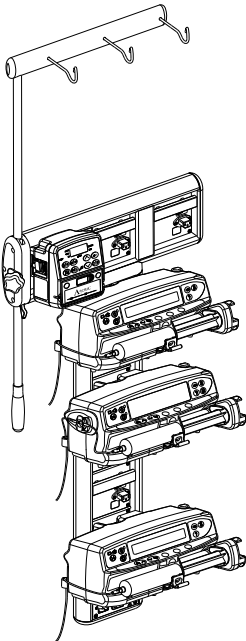

Product SKU	80283UNS00-xx
Supply Voltage	230VAC, 50 or 60Hz
Electrical Rating	500VA (nominal)
Protection Against Electrical Shock	Class 1
Classification	Continuous Operation
Supply to Pump	20VA max 230V 50-60Hz

y = Connectivity option - 1, 2 or 3
xx = Configuration

Infusion Sets

The Pump uses standard, single use, disposable infusion sets. The user is responsible for verifying the suitability of a product used, if it is not recommended by CareFusion.



- **New sets are continuously being developed for our customers. Please contact your local CareFusion representative for availability.**
- **Check infusion set materials and drug compatibility before selecting an infusion set.**
- **All infusion sets listed below are DEHP free, unless otherwise stated.**
- **It is recommended that infusion sets are changed according to the instructions in the 'Changing the Infusion Set' section. Carefully read the Directions For Use supplied with the infusion set prior to use.**

Please note these drawings are not to scale

Standard Infusion Sets

70593	<ul style="list-style-type: none"> • 15 Micron Filter • Length: 300cm 		70643	<ul style="list-style-type: none"> • 15 Micron Filter • Light protected • Length: 300cm 	
70693E	<ul style="list-style-type: none"> • SmartSite Needle-Free Valve Port • 15 Micron Filter • Length: 265cm 		70793E	<ul style="list-style-type: none"> • 2 SmartSite Needle-Free Valve Ports • Length: 265cm 	
70123E	<ul style="list-style-type: none"> • 2 SmartSite Needle-Free Valve Ports • Light protected • Inline 1.2 Micron Filter • 15 Micron Filter • Length: 275cm 		70093E	<ul style="list-style-type: none"> • 2 SmartSite Needle-Free Valve Ports • 15 Micron Filter • 1 Backcheck Valve • Length: 270cm 	
70953	<ul style="list-style-type: none"> • 15 Micron Filter • Low Sorbing • Length: 270cm 				

Blood Infusion Sets

70895	<ul style="list-style-type: none"> • 200 Micron Filter • Length: 300cm 		70896	<ul style="list-style-type: none"> • Twin Spike • 200 Micron Filter • Length: 295cm 	
70393E	<ul style="list-style-type: none"> • 2 SmartSite Needle-Free Valve Ports • 200 Micron Filter • Length: 275cm 				




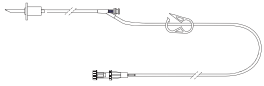
Burette Sets

70103E	<ul style="list-style-type: none"> • 2 SmartSite Needle-Free Valve Port • 1 Burette, 150ml • Length: 280cm 	
--------	---	--



Oncology Infusion Sets

70951E	<ul style="list-style-type: none"> • 3 SmartSite Needle-Free Valve Ports • 15 Micron Filter • Length: 280cm 		70954E	<ul style="list-style-type: none"> • 3 SmartSite Needle-Free Valve Ports • 15 Micron Filter • Light protected • Length: 280cm 	
70950E	<ul style="list-style-type: none"> • 5 SmartSite Needle-Free Valve Ports • 15 Micron Filter • Length: 285cm 		70952E	<ul style="list-style-type: none"> • 5 SmartSite Needle-Free Valve Ports • 15 Micron Filter • Light protected • Length: 285cm 	
70955E	<ul style="list-style-type: none"> • SmartSite Needle-Free Valve Port • 15 Micron Filter • 2 spike set • Length: 260cm 				

Secondary Infusion Sets

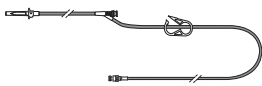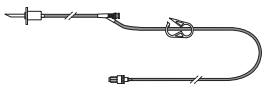72947NE	<ul style="list-style-type: none"> 1 SmartSite Needle-Free Valve Port Male Luer with Backcheck Valve Length: 35cm Light Protected 		72946NE	<ul style="list-style-type: none"> 1 SmartSite Needle-Free Valve Port Length: 30cm 	
72948NE	<ul style="list-style-type: none"> 1 SmartSite Needle-Free Valve Port Male Luer with Backcheck Valve Inline 0.2 micron Filter Length: 50cm 		72951NE	<ul style="list-style-type: none"> 1 SmartSite Needle-Free Valve Port Male Luer with Backcheck Valve Length: 35cm 	

Low Priming Volume Infusion Sets

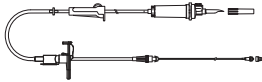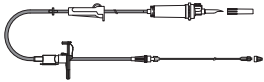70096	<ul style="list-style-type: none"> 15 Micron Filter Low Priming Volume Length: 312cm 		70641	<ul style="list-style-type: none"> 15 Micron Filter Light Protected Low Priming Volume Length: 312cm 	
-------	---	---	-------	--	---

Maintenance

Routine Maintenance Procedures

To ensure that this Pump remains in good operating condition, it is important to keep it clean and carry out the routine maintenance procedures described below.

Interval	Routine Maintenance Procedure
As per Hospital Policy	Thoroughly clean external surfaces of the Pump before and after prolonged period of storage.
Each usage	<ol style="list-style-type: none"> 1. Inspect AC power supply plug and cable for damage. 2. Inspect case, keypad and mechanism for damage. 3. Check Start up self-test operation is correct. 4. Check for activation of both the alert indicator and audio function during the Pump start-up.
Before the transfer of the Pump to a new patient and as required	Clean the Pump by wiping over with a lint-free cloth lightly dampened with warm water and a standard disinfectant/detergent solution.



If the Pump is dropped, damaged, subjected to excessive moisture or high temperature, immediately take it out of service for examination by Qualified Service Personnel.
All preventative and corrective maintenance and all such activities shall be performed at a compliant workplace in accordance with the information supplied. CareFusion is not responsible should any of these actions be performed outside the instructions or information supplied by CareFusion. For Preventative and Corrective Maintenance instructions please refer to the Technical Service Manual (TSM).
All servicing should only be performed by Qualified Service Personnel with reference to the TSM.



It is important to ensure that you only refer to the most recent version of the Directions for Use and Technical Service Manual for your CareFusion products. These documents are referenced on www.carefusion.com. Copies can be obtained by contacting your local CareFusion representative.



Please refer to Technical Service Manual for calibration procedures. The units of measurement used in the calibration procedure are standard SI (The International System of Units) units.

Battery Operation

The internal rechargeable battery allows continued operation when the AC power is unavailable, for example during patient transfer or AC power failure. When connected to the AC power supply for 4 hours, (whether the Pump is in use or not) a new battery pack will be fully charged.

The battery is maintenance free, sealed Nickel Metal Hydride and requires no routine servicing. To achieve optimum operation, ensure that the battery is fully recharged after full discharge, before storage, and at regular 3 month intervals during storage.

Charge retention will eventually degrade. Where retention is critical the internal battery should be replaced every 3 years.

It is recommended that only Qualified Service Personnel replace the battery. For further information regarding the replacement of batteries refer to the Technical Service Manual.

The battery pack used in this Alaris Volumetric Pump is manufactured by CareFusion and includes a proprietary PCB (printed circuit board) designed specifically for the Alaris Volumetric Pump, and in conjunction with Alaris Volumetric Pump software, controls battery use, charge and temperature. Any use of battery packs that are not manufactured by CareFusion in the Alaris Volumetric Pump is at your sole risk, and CareFusion does not provide any warranty for or endorsement on any battery packs that are not manufactured by CareFusion. CareFusion product warranty shall not apply in the event the Alaris Volumetric Pump has suffered damage or premature wear, or malfunctions or otherwise operates incorrectly, as a result of use with a battery pack that is not manufactured by CareFusion.

Cleaning and Storage



Before cleaning always switch OFF and disconnect from the AC power supply. Never allow liquid to enter the casing and avoid excess fluid build up on the Pump. Do not use aggressive cleaning agents as these may damage the exterior surface of the Pump. Do not steam autoclave, ethylene oxide sterilise or immerse this Pump in any fluid. Ensure the membrane covering the pumping mechanism is intact prior to cleaning. If faulty, remove from use and contact Qualified Service Personnel.

The plug of the flow sensor must not be immersed in water as damage will occur.

The infusion set is a disposable single use item and should be discarded after use according to hospital protocol.

Cleaning the Pump

Before the transfer of the Pump to a new patient and periodically during the use, clean the Pump by wiping over with a lint-free cloth lightly dampened with warm water and a standard disinfectant/detergent solution.

Do not use the following disinfectant types:

- Disinfectants which are known to be corrosive to metals must not be used, these include:
 - NaDcc (such as Presept)
 - Hypochlorites (such as Chlorasol)
 - Aldehydes (such as Cidex)
 - Cationic Surfactants (such as Benzalkonium Chloride)
- Iodine (such as Betadine) will cause surface discoloration
- Concentrated Isopropyl alcohol based cleaners will degrade plastic parts
- Aromatic Hydrocarbons (such as chlorohydrocarbons, e.g. Anti-static foam cleaner)

Recommended cleaners are:

Brand	Concentration
Hibiscrub	20% (v/v)
Virkon	1% (w/v)

The following products were tested and are acceptable for use on the Pump if used in accordance with the specified manufacturer's guidelines.

- Warm soapy water
- Mild detergent in water (e.g. Young's Hospec)
- 70% Isopropyl Alcohol in water
- Chlor-Clean
- Clinell Sporidical wipes
- Hibiscrub
- TriGene Advance
- Tristel Fuse sachets
- Tristel Trio wipes system
- Tuffie 5 wipe
- Virkon Disinfectant
- Virusolve+ (Ready To Use)
- Virusolve+ (Wipes)

Cleaning the Door

Refer to the Technical Service Manual for information for removing the door to facilitate cleaning of the fluid path. The use of a screwdriver (torx) is required and should only be carried out by Qualified Service Personnel.

Cleaning the Flow Sensor

Before the transfer of the flow sensor to a new infusion set and periodically during use, clean the flow sensor by wiping over with a lint-free cloth lightly dampened with warm water and a standard disinfectant/detergent solution. Ensure the connector does not get wet. Dry flow sensor before use.

To aid cleaning of flow sensors which have been heavily soiled, contaminated or if the handle operation is not free moving, then the flow sensor may be immersed and soaked in clean soapy water. The inside of the spring mechanism can be cleaned by activating it while submerged in the water.

After cleaning, the flow sensor should be allowed to dry fully prior to use.


Storing the Pump

If the Pump is to be stored for an extended period it should be first cleaned and the internal battery fully charged. Store in a clean, dry atmosphere at room temperature and, if available, employ the original packaging for protection.

Once every 3 months during storage, carry out functional tests as described in the Technical Service Manual and ensure that the internal battery is fully charged.

Disposal


Information on Disposal for Users of Waste Electrical and Electronic Equipment

This  symbol on the product and/or accompanying documents means that used electrical and electronic products should not be mixed with household waste.

If you wish to discard electrical and electronic equipment, please contact your CareFusion affiliate office or distributor for further information.

Disposing of this product correctly will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.


Information on Disposal in Countries outside the European Union

This  symbol is only valid in the European Union. The product should be disposed of taking environmental factors into consideration. To ensure no risk or hazard, remove the nickel metal hydride battery pack and the lithium battery from the control PCB and dispose of as outlined by the local country regulations. All other components can be safely disposed of as per local regulations.

IrDA, RS232 and Nursecall Specification

IrDA/RS232/Nursecall Feature

The IrDA/RS232/Nursecall is a feature that allows the Pump to be connected to an external device for the purpose of data communication.



The nursecall interface provides a remote backup to the internal audible alarm. It should not be relied upon to replace monitoring of the internal alarm. The signal leaves the IrDA port and the RS232 for Nurse call within one second after the alarm condition is detected.

Refer to the Technical Service Manual for further information regarding the RS232 interface.

The assessment for the suitability of any software used in the clinical environment to control receive data from the Pump lies with the user of the equipment. This software should include detection of the disconnection or other failure of the RS232 cable.


Any connected analogue and digital components are required to meet IEC/EN60950 for data processing and IEC/EN60601 for medical devices. Anyone connecting additional devices to the signal input or output is a system configurator and responsible for meeting the requirements of the system standard IEC/EN60601-1-1.

To connect to the RS232 port use spare part 1000SP01183 - RS232 cable.

RS232/Nursecall Connection Data

Nursecall Specification:

Connector	D Type - 9 Pin
TXD/RXD	EIA RS232-C Standard
Baud Rate	115k Baud
Start Bits	1 Start Bit
Data Bits	8 Data Bits
Parity	No Parity
Stop Bits	1 Stop Bit
Nurse Call Relay Contacts	Pins 1, 8 + 9, 30V dc, 1A rating

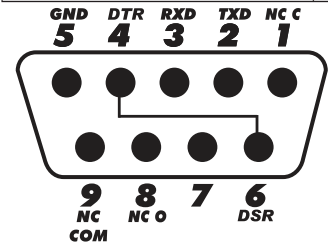

Typical Connection Data:

- 1. Nursecall (Relay) Normally Closed
- 2. Transmit Data (TXD) Output
- 3. Received Data (RXD) Input
- 4. DTR → DSR (6)
- 5. Ground (GND)
- 6. DSR → DTR (4)
- 7. Not used
- 8. Nursecall (Relay) Normally Open
- 9. Nursecall (Relay) Common

IrDA

Baud Rate	115k Baud
Start Bits	1 Start Bit
Data Bits	8 Data Bits
Parity	No Parity
Stop Bits	1 Stop Bit

Trumpet and Flow Rate Curves





In this Pump, as with all infusion systems, the action of the pumping mechanism and variations cause short-term fluctuations in rate accuracy.

The following curves show typical performance of the system in two ways: 1) the accuracy of fluid delivery over various time periods is measured (trumpet curves), and 2) the delay in onset of fluid flow when infusion commences (start-up curves).


Trumpet curves are named for their characteristic shape. They display discrete data averaged over particular time periods or 'observation windows', not continuous data versus operating time. Over long observation windows, short term fluctuations have little effect on accuracy as represented by the flat part of the curve. As the observation window is reduced, short term fluctuations have greater effects as represented by the *mouth* of the trumpet.

Knowledge of system accuracy over various observation windows may be of interest when certain drugs are being administered. Short term fluctuations in rate accuracy may have clinical impact depending on the half-life of the drug being infused and the degree of inter vascular integration, the therapeutic effect cannot be determined from the trumpet curves alone.


The start-up curves represent continuous flow versus operating time for two hours from the start of the infusion. They exhibit the delay in onset of delivery due to mechanical compliance and provide a visual representation of uniformity. Trumpet curves are derived from the second hour of this data. Tests performed per IEC/EN60601-2-24 standard.

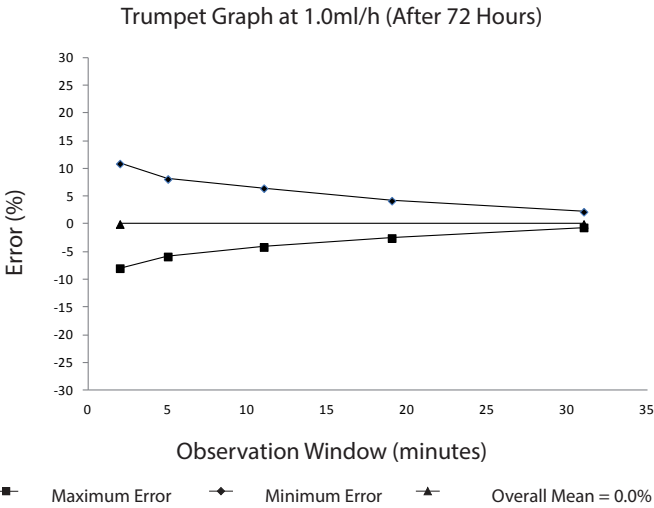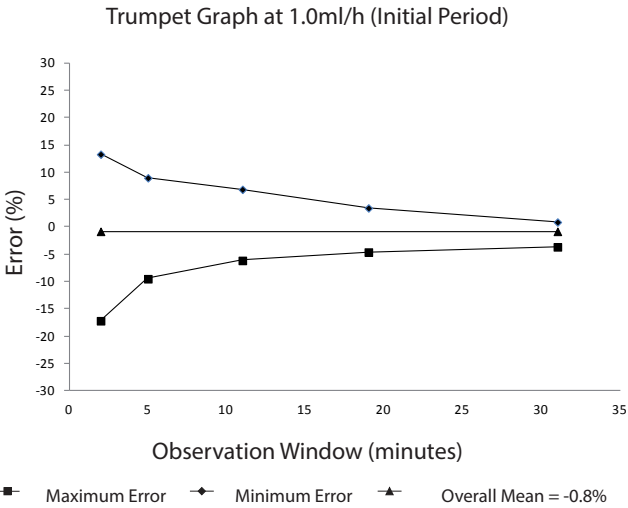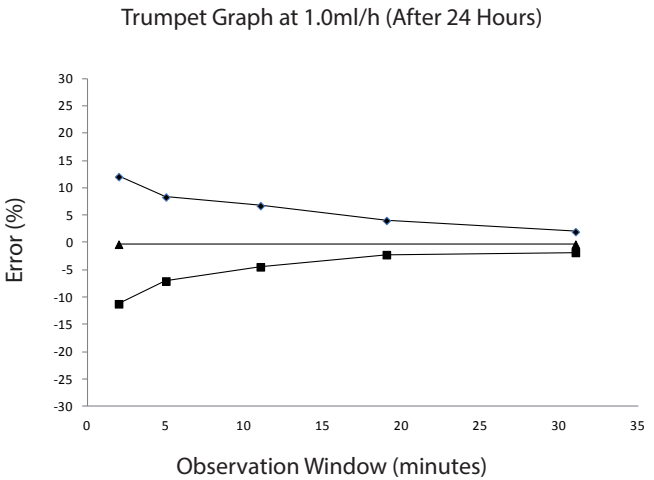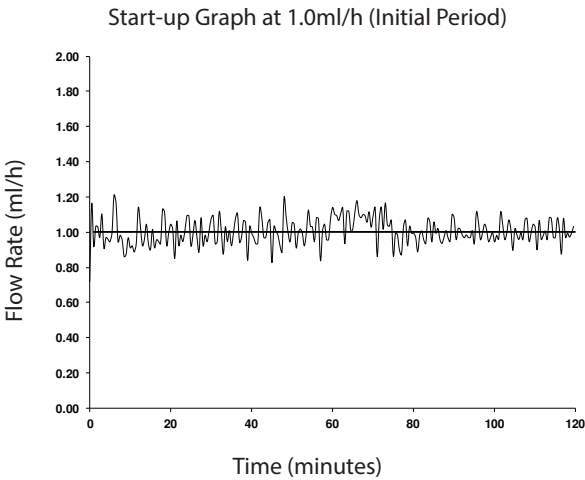


Start-up Graph at 25.0ml/h (Initial Period)

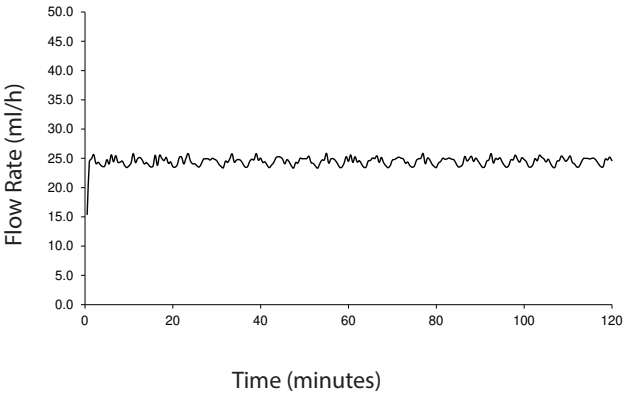


Trumpet Graph at 25.0ml/h (After 24 Hours)

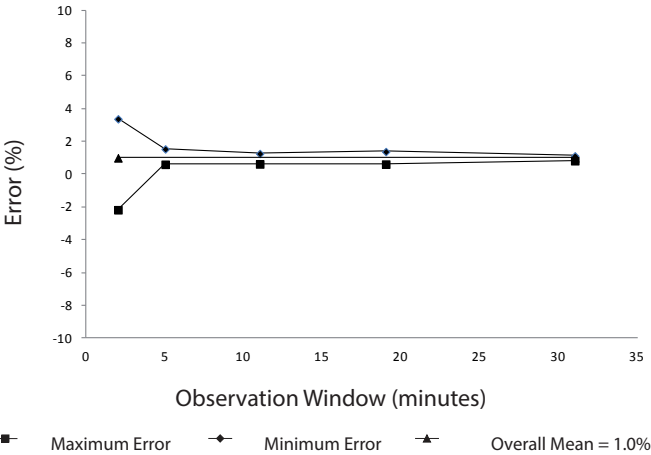

Trumpet Graph at 25.0ml/h (Initial Period)

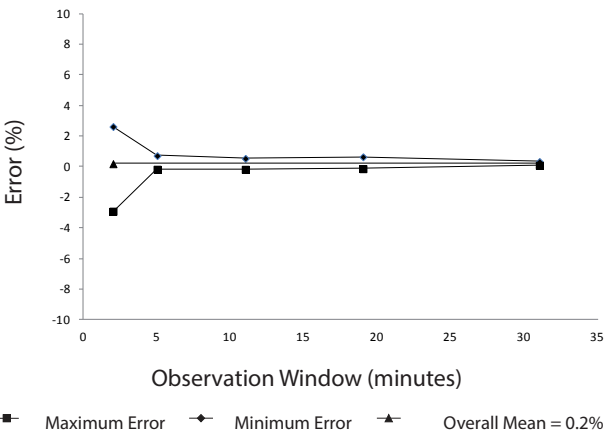

Trumpet Graph at 25.0ml/h (After 72 Hours)

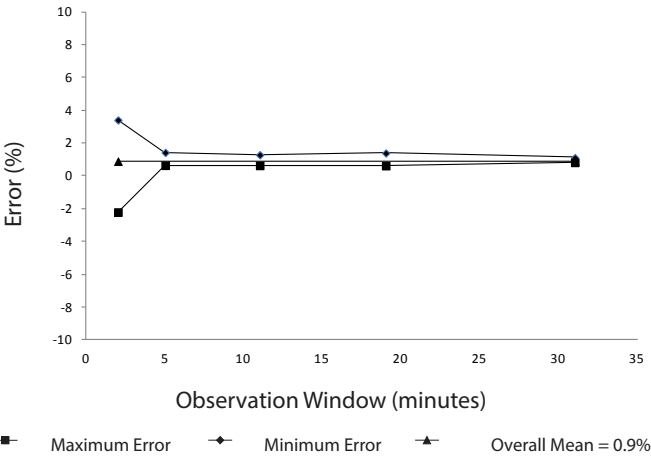

Note: The typical flow rate and trumpet curves are achieved using a recommended infusion set.

Products and Spare Parts

Spare Parts

A comprehensive list of spare parts for this Pump is included within the Technical Service Manual.

The Technical Service Manual (1000SM00022) is now available in electronic format on the World Wide Web at :-

www.carefusion.co.uk/alaris-technical/

A username and password are required to access our manuals. Please contact a local customer services representative to obtain login details.

Part Number	Description
1000SP01613	Internal Battery Pack
1001FAOPT91	AC Power Cable - UK
1001FAOPT92	AC Power Cable - European
1000SP01183	RS232 Cable

Alaris Editor Software

Part Number	Description
1000SP01534	Alaris Editor and Alaris Transfer Tool Software Kit
1000SP01535	Alaris Transfer Tool Software Kit

Service Contacts

For service contact your local Affiliate Office or Distributor:

AE	DE	HU	PT
CareFusion, PO Box 5527, Dubai, United Arab Emirates.	CareFusion, Pascalstr. 2, 52499 Baesweiler, Deutschland.	CareFusion, Döbrentei tér 1, H-1013 Budapest, Magyarország.	CareFusion, Avda. São Miguel, 296 Atelier 14 2775-751 Carcavelos, Lisboa Portugal
Tel: (971) 4 28 22 842	Tel: (49) 931 4972 837	Tel: (36) 1 488 0232 Tel: (36) 1 488 0233	Tel: +351 219 152 593
Fax: (971) 4 28 22 914	Fax: (49) 931 4972 318	Fax: (36) 1 201 5987	Fax: +351 219 152 598
AU	DK	IT	SE
CareFusion, 3/167 Prospect Highway, PO Box 355 Seven Hills, NSW 2147, Australia.	CareFusion, Firkovvej 25 B, 2800 Lyngby, Danmark.	CareFusion, Via Ticino 4, 50019 Sesto Fiorentino, Firenze, Italia.	CareFusion, Hammarbacken 4B, 191 46 Sollentuna, Sverige.
Tel: (61) 1800 833 372	Tlf. (45)70 20 30 74	Tél: (39) 055 30 33 93 00	Tel: (46) 8 544 43 200
Fax: (61) 1800 833 518	Fax: (45)70 20 30 98	Fax: (39) 055 34 00 24	Fax: (46) 8 544 43 225
BE	ES	NL	US
CareFusion, Leuvensesteenweg 248 D, 1800 Vilvoorde, Belgium.	CareFusion, Edificio Veganova, Avenida de La Vega, nº1, Bloque 1 - Planta 1, 28108 Alcobendas, Madrid, España.	CareFusion, De Molen 8-10, 3994 DB Houten, Nederland.	CareFusion, 10020 Pacific Mesa Blvd., San Diego, CA 92121, USA.
Tel: +32 (0) 2 267 38 99	Tel: (34) 902 555 660	Tel: +31 (0)30 2289 711	Tel: (1) 800 854 7128
Fax: +32 (0) 2 267 99 21	Fax: (34) 902 555 661	Fax: +31 (0)30 2289 713	Fax: (1) 858 458 6179
CA	FR	NO	ZA
CareFusion, 235 Shields Court, Markham, Ontario L3R 8V2, Canada.	CareFusion, Parc d'affaire le Val Saint Quentin 2, rue René Caudron 78960 Voisins le Bretonneux France	CareFusion, Fjordveien 3 1363 HØVIK Norge.	CareFusion, Unit 2 Oude Molen Business Park, Oude Molen Road, Ndabeni, Cape Town 7405, South Africa.
Tel: (1) 905-752-3333	Tél: (33) 01 30 02 81 41	Tel: (47) 64 00 99 00	Tel: (27) (0) 860 597 572 Tel: (27) 21 510 7562
Fax: (1) 905-752-3343	Fax: (33) 01 30 02 81 31		Fax: (27) 21 5107567
CH	FI	NZ	
CareFusion, A-One Business Centre Zone d'activités Vers-la-Pièce n° 10 1180 Rolle / Switzerland	CareFusion, Kuortaneenkatu 2, 00510 Helsinki	CareFusion, 14B George Bourke Drive, Mt Wellington 1060, PO Box 14-518, Panmure 1741, Auckland, New Zealand	
Ph.: 0848 244 433	Tel: +358 207871 090	Tel: 09 270 2420 Freephone: 0508 422734	
Fax: 0848 244 100		Fax: 09 270 6285	
CN	GB	PL	
CareFusion, 上海代表机构, 中国上海市张杨 路 500 号, 上海时代广场办事处大楼, A 座, 24 层, 邮编: 200122。	CareFusion, The Crescent, Jays Close, Basingstoke, Hampshire, RG22 4BS, United Kingdom.	CareFusion, ul. Rzymowskiego 53, 02-697 Warszawa, Polska.	
电话: (86) 21 58368018	Tel: (44) 0800 917 8776	Tel: (48) 225480069	
传真: (86) 21 58368017	Fax: (44) 1256 330860	Fax: (48) 225480001	

Rev. J

CareFusion, Alaris, Guardrails, IVAC, SmartSite and the CareFusion logo are trademarks or registered trademarks of CareFusion Corporation or one of its affiliates. All rights reserved. All other trademarks are property of their respective owners.

©2013 - 2015 CareFusion Corporation or one of its affiliates. All rights reserved.

This document contains proprietary information of CareFusion Corporation or one of its affiliates, and its receipt or possession does not convey any rights to reproduce its contents, or to manufacture or sell any product described. Reproduction, disclosure, or use other than for the intended purpose without specific written authorization of CareFusion Corporation or one of its affiliates is strictly forbidden.



CareFusion Switzerland 317 Sarl,
A-One Business Centre, Z.A Vers –La-
Pièce n° 10, CH-1180, Rolle



CareFusion UK 305 Ltd., The Crescent,
Jays Close, Basingstoke, Hampshire,
RG22 4BS, UK

1000DF00660 Issue 8